



Bally Alpha Settings for standalone.


First clear the machine

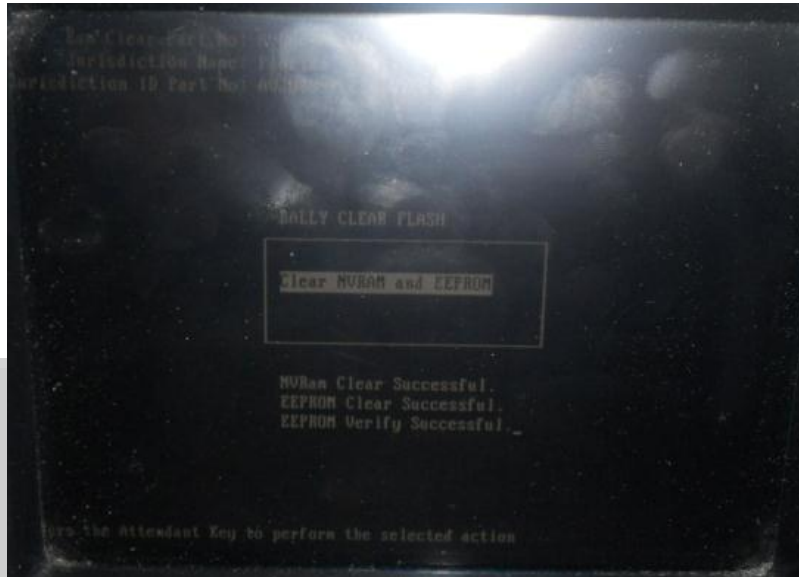


Re-install the O/S and Game CF cards and re-boot the machine.

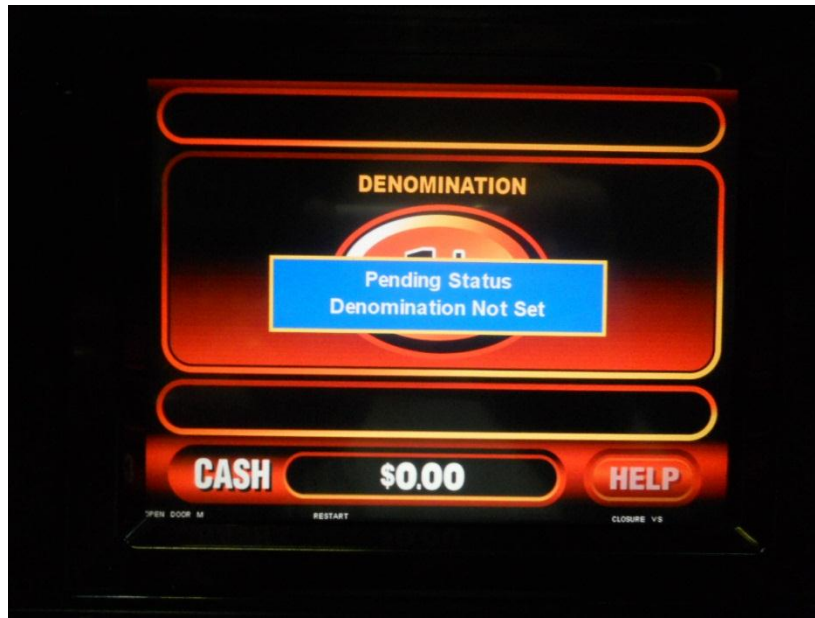

Press the test button to access the settings menu
(The screen should be purple not orange)

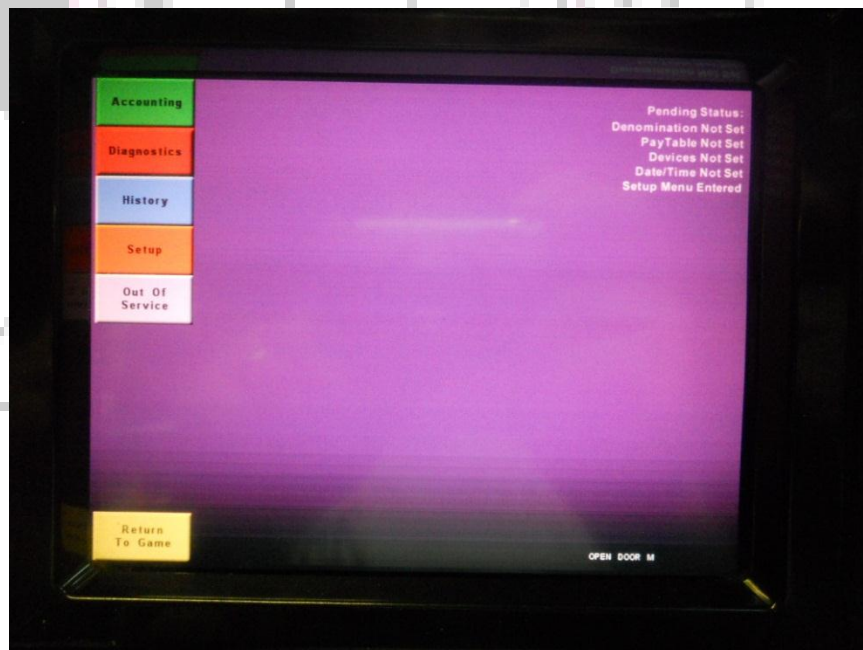

Touch the Machine Setup button to expand the menu

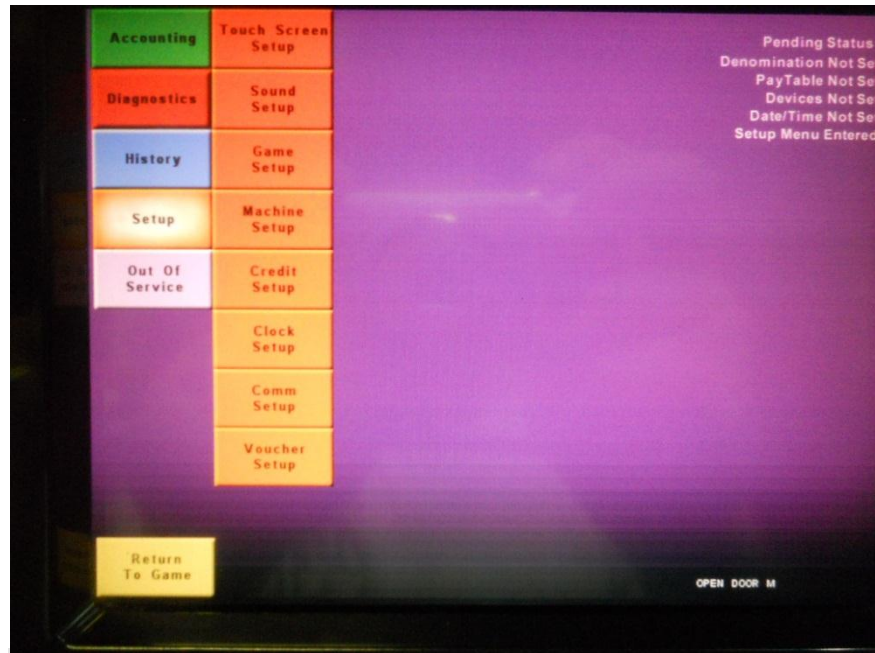

Then select Device Setup


You need to program the Hopper, Printer, Coin acceptor and Bill Validator first'



For my example I will be installing a printer, bill validator and the button panel only



Select your options from the drop down menu and hit Save then Exit

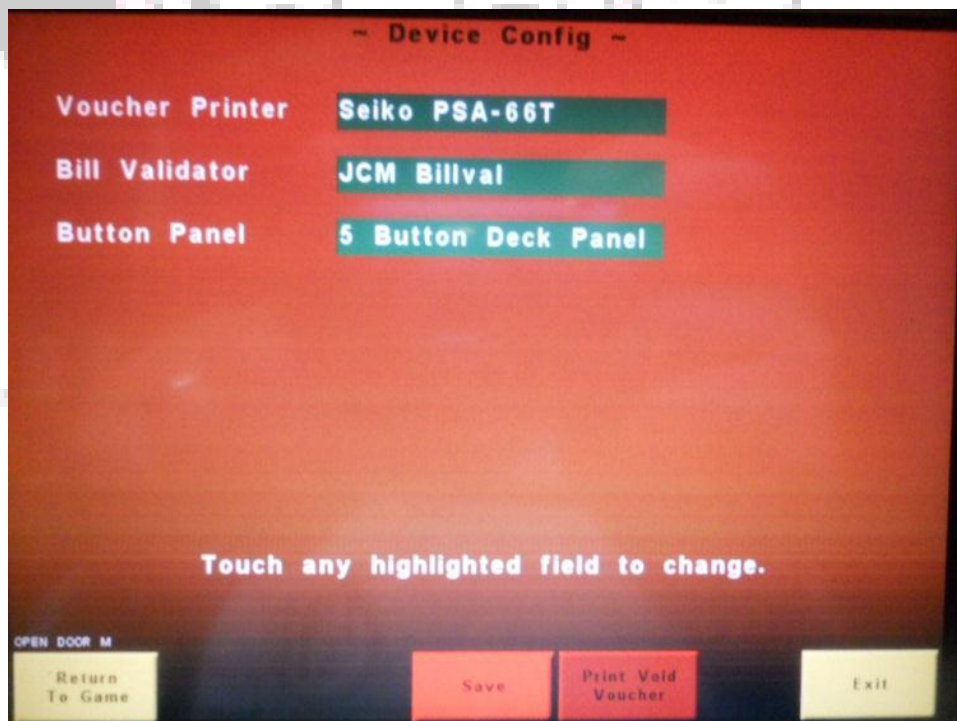

This will bring you back to the previous screen




Now let's setup Credit Limits




Here are the settings I'm currently using. If you have a Hopper you will need to input the limit.



No need to change any setting under Cash Out Options

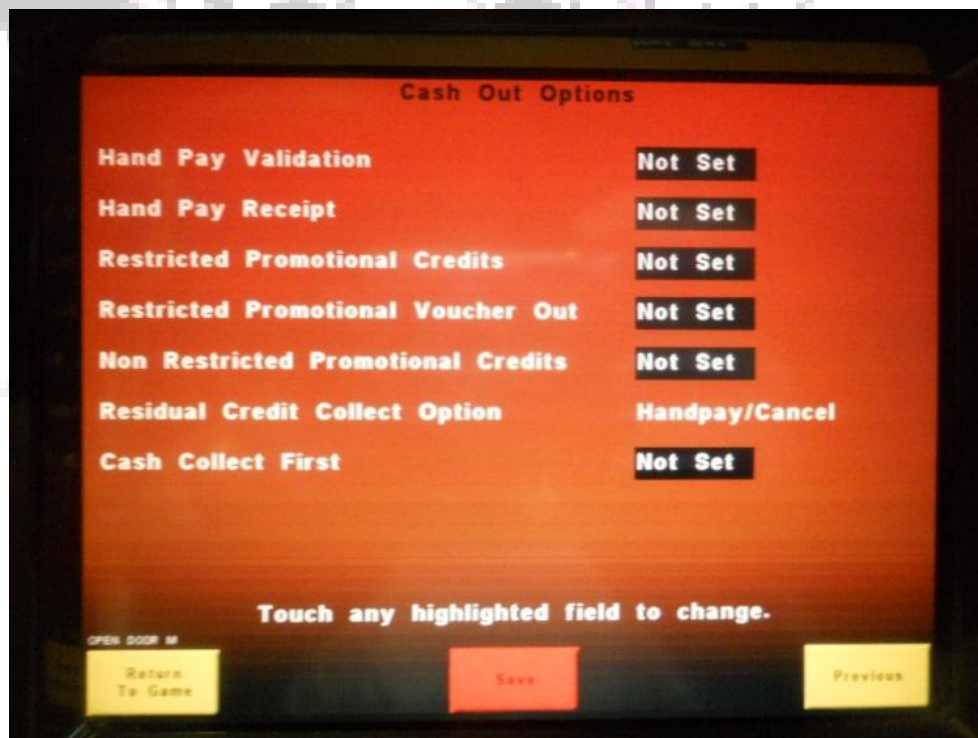

In my example I will set the machine for Multi-Denom then touch Save

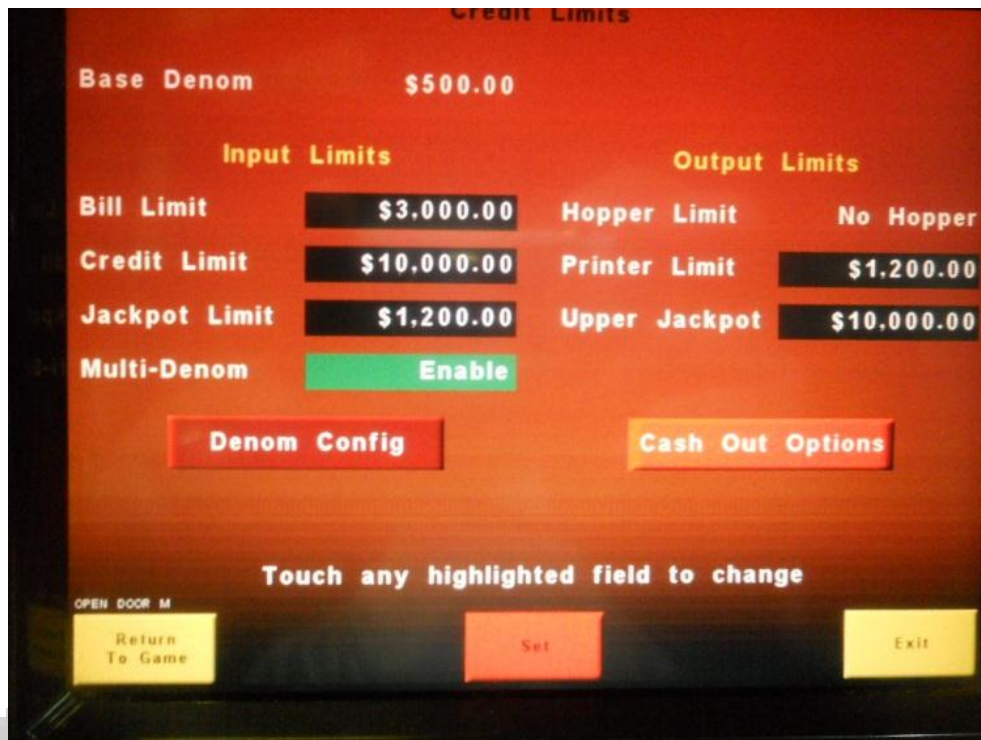


Now the Denom Config button is highlighted, touch it to enter.



Here you select different denom's and then percentages for each. Touch Save.



Now back at the main menu the next setting is Clock Setup

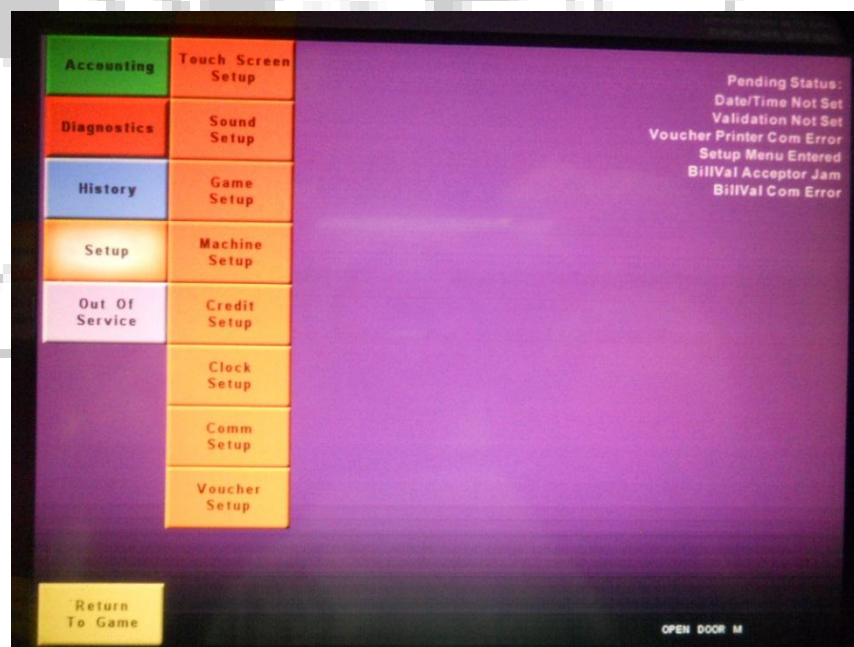

Mine did not change, but you have to enter the menu and select Set and Exit.



Back at the main menu select Comm Setup then Serial Setup




Here we select Host Comm I and set to SAS Primary



Now touch the Config next to SAS Primary




Then change the Validation to Standard. Select Save

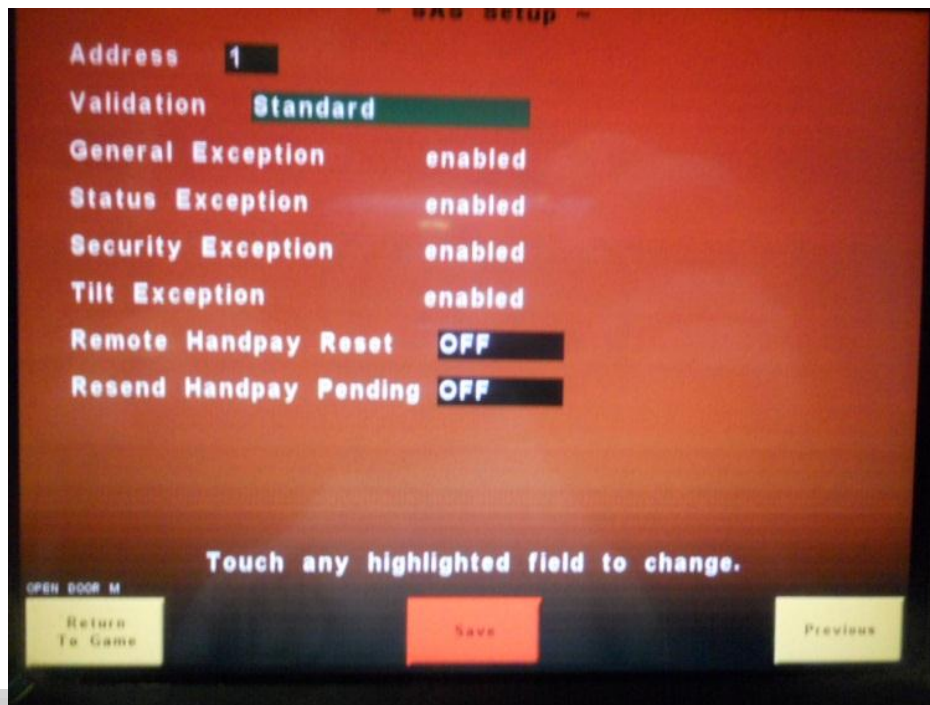


A message will advise of Data modified, select Save




This will bring you to another message about Comm II and Sgd being disabled. Nothing is on Comm II and we have no Progressive so select, Yes

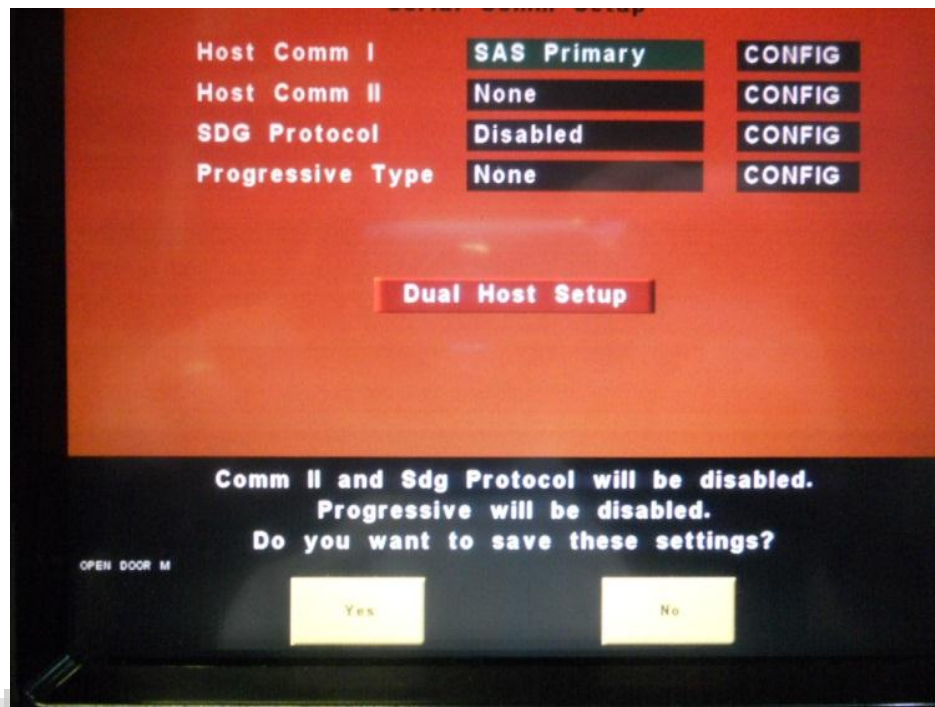

Now Dual Host Setup will be illuminated, Select that box next.

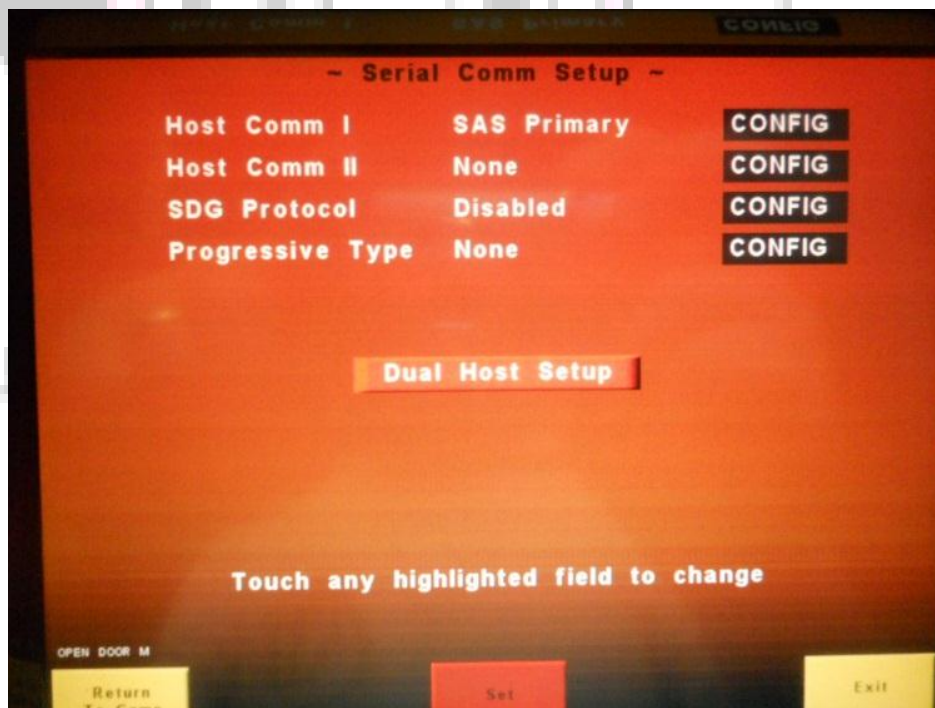


Change Machine Control to SAS Primary and Voucher Out to SAS Primary, Select Save.

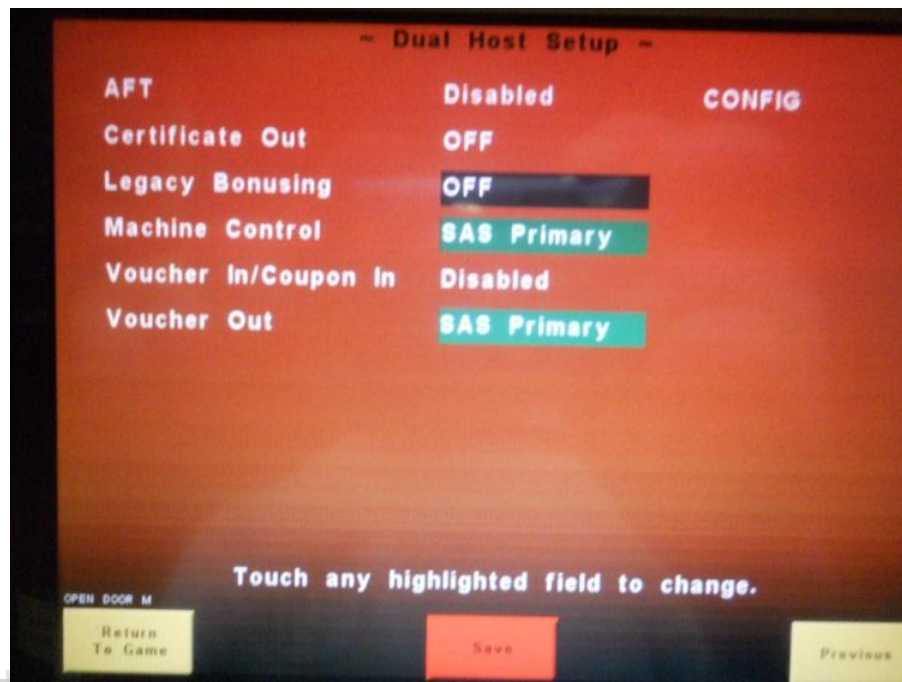


Back at the main menu you will see pending status has cleared all messages.

(I have a Comm Error as my printer is not plugged in)

Select Return to game and close the door

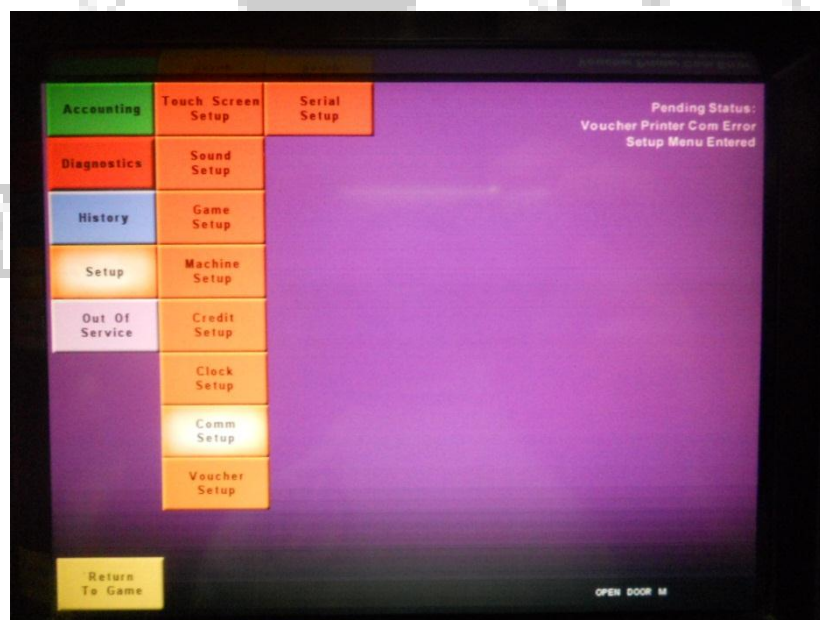

After I attach the printer the error will clear

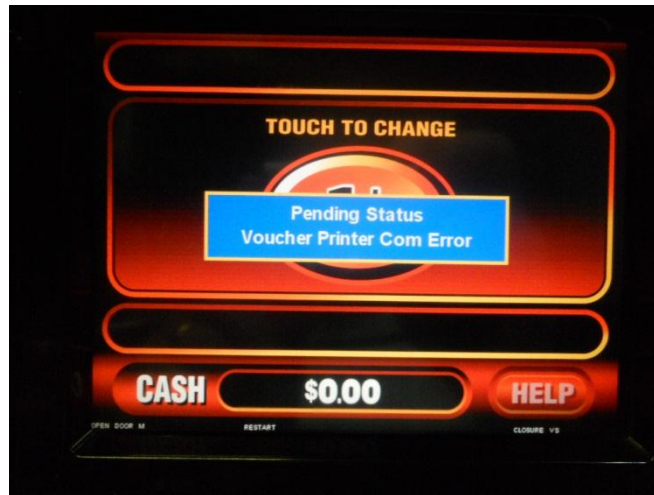

Main screen



The Volume default is very low and most likely need to be changed.

You can access this through the key switch.