

**USE GAME CHANGE PROCEDURE FIRST, IF MACHINE DOES NOT
RECOGNIZE GAME IN P10, USE THIS PROCEDURE!!!!!!!!!!!!**

BALLY GAMEMAKER TOTAL CLEAR PROCEDURE

Step 1:

Pull the board
Install Clear Chip in P10
Turn 7 & 8 to ON for DPSW1
Pull any games you want to replace
Install the New Games
Install the board
Power up
Wait for message
Wait for the EPROM & Saferam Erase to complete
Depending on your Mains, you may have to recycle power at this time
Go through Configuration of EPROM & Saferam
Turn Audit Switch to lock in each selection
Power down

Step 2:

Pull the board
Pull Clear Chip in P10
Replace with desired game chip
Set 7 & 8 to OFF for DIP switch SW1
Install the board
Power up
Wait for message

Follow any forced onscreen setup instructions on first powerup

Depending on your Mains, this may or may not include:

- Setting up the Currency symbol and Country Options (multi-denomination Main)
- Setting up the machine's Coin Value (or base denomination in multi-denom Mains)
This step could include selecting tokenization, if the Mains support it.
- Selecting the denominations that will be available for all games (multi-denom Mains)
- Selecting the denominations that each game will use (multi-denom Mains)
- Selecting the max (and min) bet options for games that support this.

Double check the following Configuration menu items:

Play Options (to set speed, double up options, if enabled, & game colors.)
Turn On/Off Games (to turn on new games if necessary.)
Hopper/Credit Limits
Cardback Options (if available, to select the card back designs)
Tournament (rare. If tournament chips have been installed and will be used)

You should be up and running.

You might get a message saying new game installed, In that case, try installing the clear chip in P10 once more to enable the game will occupy P10. This may not work with all mains, in which case a complete clear would be required to activate the game that resides in P10.

Set up progressives if desired (see progressive setup documentation)

These are the settings for my machine using
22 Mains:

Jurisdiction – ONE
SAS – 2.83
Chassis Type – UPRIGHT
Coin Acceptor – COIN ACCEPTOR
Bill Acceptor – JCM DBV
Hopper – COIN
Door Type – MECHANICAL
Double Down – ON
Tournament – ON

Primary Host – NONE
Secondary Host – NONE
EFT – DISABLE
Secondary Device – NONE

Typical settings for a V7200 model are as
follows:

Jurisdiction - ONE
Primary Host - NONE
Secondary Host - NONE
SAS - NONE
Chassis Type - UPRIGHT
Coin Acceptor - COIN ACCEPTOR and COD BOARD
Bill Acceptor - JCM WBA
Hopper - COIN
Door Type - PULSED OPTIC
Double Down - OFF
Tournament - OFF
EFT - DISABLE
Secondary Device - NON