

IV.9 RAM Clear


- 1) Open the Main Door and power down the machine.
- 2) Open the logic door.
- 3) Turn the DIP switch 1 to ON (see illustr. IV.9.1).
- 4) Close the logic door.
- 5) Power up the machine.
- 6) After the query has been made press any button to perform a complete RAM Clear.



INFORMATION

Until this moment the RAM Clear may avoided if the machine is powered down before a button is pressed.

- 7) After the RAM Clear is completed, power down the machine.
- 8) Open the logic door.
- 9) Turn the DIP switch 1 to OFF (see illustr. IV.9.1).
- 10) Close the logic door.
- 11) Power up the machine.
- 12) Close the Main Door.
- 13) The machine switches automatically to the audit menu to system page
MACHINE SETUP > INITIAL SETUP, where the basic settings must be fixed.
- 14) If a RAM Clear is performed in a cash runner machine with AGI internal jackpot, the machine must be restarted once prior to determine the jackpot settings (initial value, increment, etc.).

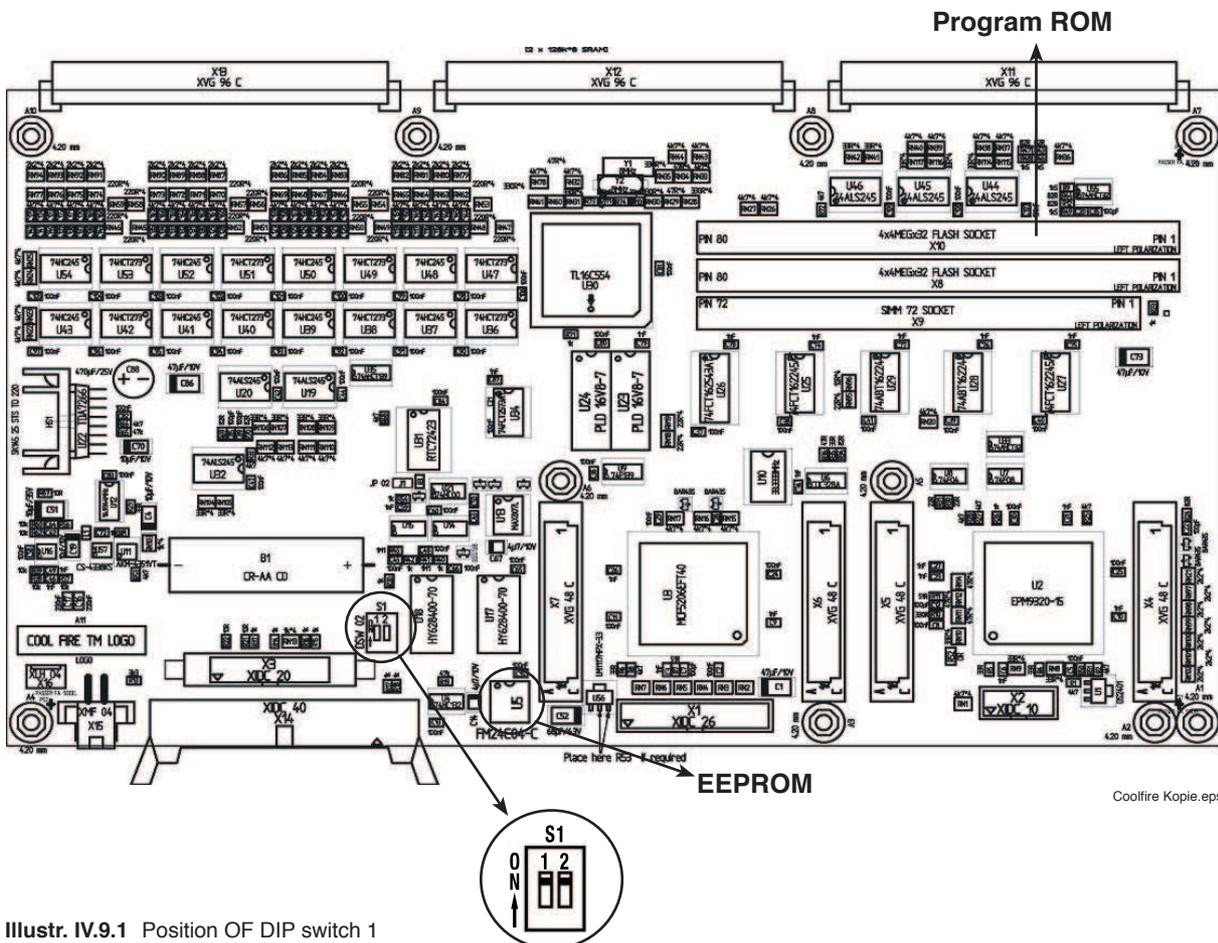

Illustr. IV.9.1 Position OF DIP switch 1