

2.4.2 Sound Options (Option: [3.2])

Volume Control/Game Volume (Option: [3.2.1])

Note: If the machine has an LCD/M-Slave installed, some sounds are played by that device. Use the *Setups* and *Info* options provided by the LCD/M-Slave to control those sounds. The options on this menu affect only the sounds generated by the base machine.

Game Volume (Option: [3.2.1.1])

Use the Game Volume option to set the volume for game play music and sound effects. Set the volume using the following procedure:

1. Navigate through the list of settings using the **CHANGE** and **CASH/CREDIT** switches.
2. Press the **PLAY MAX CREDITS** switch to exit the screen and save the changes, or press the **SPIN REELS** switch to reset the value to the previous setting.

Money Volume (Option: [3.2.1.2])

Use the Money Volume option to set the volume for monetary transactions, such as bill in and out and ticket in and out.