
❑ Face Plate Service Indicators

The following procedures offer solutions to common problems encountered with the JCM bill acceptor..

Refer to the appropriate maintenance procedures or electronic diagrams and parts manuals for further information on any procedure or other information not covered in this section.

Lit

When the red or green LEDs or the bill denomination light stay lit constantly, the validator is enabled and ready to accept bills.

- If the validator will not accept bills or rejects them immediately, replace the validator assembly.
- If the validator accepts the bill, retains it momentarily and then rejects it, check the following items:

Clean the sensors

Check the DIP switch settings

Check the game software country code setting

Perform the calibration procedures

- If these procedures fail to correct the problem, replace the validator assembly. If the condition continues, replace the power supply. If the problem persists, replace the machine processor board.

Not Lit

If the LEDs or bill denomination light are not lit:

1. Check for a blown 24 VAC fuse in the machine (DBV-147 only).
2. Replace the validator power supply (DBV-45/145 only).
3. Replace the red, green or bill denomination light assembly or wiring.
4. Replace the entire validator assembly.

Note: At installation, check to see that the game EPROM communication protocol matches the bill acceptor (ID022, ID023 etc.).
