

## Configuration Key Cashline

The Configuration Key enables the Operator to select a specific percentage from a range of Paytables selectable from one EPROM.

### General Information

The PAYTABLE EPROM, located at U6 on Main Board, is replaced with the Config Key EPROM and then powered up. After the Power up, the Main Software interprets the Config Key and initialises the RAM, so that the Config Key is installed. The Main Software will then start a special Configuration Setup, which enables the Operator to select a specific Paytable version. One physical EPROM, will contain all the Paytable versions for one game type.

### Hardware Handling

1. Power down machine
2. Remove the PAYTABLE EPROM from location U6 on the Mainboard
3. Insert the Config Key EPROM into location U6
4. Power up machine
5. A message will be displayed on the Monitor:  
Config EPROM detected. Restart with original Paytable (U6).
6. Power down machine
7. Remove Config EPROM from location U6 and replace with PAYTABLE EPROM.
8. Power up machine

During the Powering up process the Software will check if the RAM was initialised by the insertion of a Config Key. If the check proves valid the Software will start the special Configuration Setup.