


Clear Memory - RAM Reset

To clear the memory, including PC-Setup and all statistic data, execute the following steps:


- Switch off power
- Exchange EPROM U2 with CLEAR-EPROM RRES_XX
 - Remove Masterboard from Logicbox
 - Remove EPROM U2 carefully out of socket
 - Insert CLEAR-EPROM into same socket
 - Insert Masterboard into Logicbox
- Turn on power
- Wait approx. 10 seconds (audible signal)
- Switch off power
- Exchange CLEAR-EPROM with original EPROM U2 in the same way as stated above
- Turn on power
An error message RAM ERROR will be displayed
- Press and hold the red reset switch for approx. 5 seconds (audible signal)
- Carry out basic software setup
- Select payable

Note:

*All statistic data (Audit Menu- Statistics) are set to 0 (zero).
All machine settings (PC-Setup, Menu Setup) are reset to factory settings.*

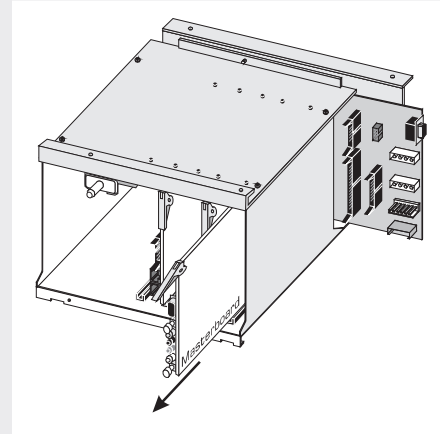

Remove Masterboard

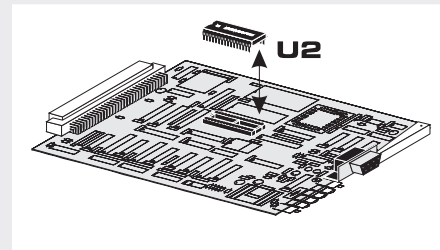

Exchange EPROM



See page 4



See page 12