

CHICKEN SERVICE PROBLEMS

NOTE: **** DO THE “TRY SOLUTIONS IN THE ORDER AS LISTED”****

DISCARD: NO DISCARD OR CARDS CANNOT BE RECALLED

TRY SOLUTION 1, 2, 3, 6, 7, 4, 5

COINS NOT ACCEPTED:

TRY SOLUTION 3, 2, 5, 6, 7

SCREEN/MONITOR IS ROLLING:

TRY SOLUTION 8, 9

NO ELECTRIC POWER IN UNIT:

TRY SOLUTION 10, 11

“LOCKED UP”: MACHINE WILL NOT OPERATE

TRY SOLUTION 2, 3, PLUS REMOVE THE BATTERY FOR 10 MIN

BATTERIES:

TRY SOLUTION 12


SOLUTIONS

1. PRESS ON 4 GAME CHIPS (LEFT FRONT BOARD) AND 5/6 CHIPS ON LEFT REAR BOARD (WITH LARGE WHITE LABELS) TO SEE IF TIGHT. CHECK FOR BLOWN FUSES. (#1 ON BACK RIGHT SIDE OF UPPER COMPARTMENT.
2. SHUT UNIT OFF FOR 15 SECONDS, THEN TURN BACK ON AND ACTIVATE ALL BUTTONS SEVERAL TIMES. SHUT OFF AGAIN. REPEAT FROM TIME TO TIME. NOTE: THIS INCLUDES ACTIVATING "CREDIT" BUTTON BY FLIPPING SWITCH AND ALSO PUTTING IN QUARTERS, THEN PLAYING GAME AND ALSO USING KNOCK – OFF SWITCH.
3. ARE WIRES LOOSE, BROKEN, OR BARE ON ALL SWITCHES, BUTTONS, COIN ACCEPTOR SWITCH?
4. CHECK TO BE SURE NO SWITCH WIRES ARE LOOSE OR BROKEN/SHORTED OUT.
5. BAD ACCEPTOR SWITCH. REPLACE AND MAKE SURE THE FLIPPER WIRE MOVES FREELY. CONSIDER USING SPRAY CLEANER BEFORE REPLACING SWITCH. MAKE SURE CLEANER IS EVAPORATED.
6. SPRAY CLEANER: TURN OFF MACHINE AND SPRAY AND ACTIVATE BUTTONS ON OUTSIDE OF MACHINE, AND ALSO THE SWITCHES INSIDE THE MACHINE. COULD HAVE DIRT OR STICKY BEVERAGE SPILLED ON ABOVE. LEAVE PARTS DRY BEFORE TURNING ON MACHINE. (BLOW/FAN UNTIL EVAPORATED)
7. SWITCH IS BAD, OR PARTS ARE WORN. (THE LENGTH OF THE BUTTON IS TOO SHORT TO REACH THE ON/OFF SWITCH IN THE LIGHTED HOLDER AREA). OR BOTH ARE TOO SHORT/WORN OFF, ---OR--- IS THE LIGHTED AREA FITTING "SEATED" IN ALL THE WAY? NOTE: IF YOU PUSH ON THIS FITTING IT WILL USUALLY ACTIVATE THE FUNCTION BECAUSE THERE IS SOME "GIVE" IN THIS AREA REGARDLESS OF WHETHER THE FITTING IS SEATED PROPERLY OR IMPROPERLY.
8. SHUT UNIT OFF AND ON 15 SECONDS SEVERAL TIMES.

9. SEE PAGE "9" FOR ADJUSTMENT LOCATIONS TO STOP THE ROLL.
10. CHECK ON/OFF SWITCH ON BACK OF UNIT. CHECK FUSES IN UPPER CABINET AT RIGHT REAR.
11. USE BATTERY CHECKER TO SEE IF ELECTRIC IS PRESENT IN WALL SOCKET. THEN SEE IF IT IS IN THE END OF THE ELECTRIC CORD THAT PLUGS INTO THE MACHINE. IF THERE IS ELECTRIC AT BOTH, THE PROBLEM IS PRESUMABLY A BAD SWITCH.
12. CHANGE BATTERIES IF READING IS LESS THAN 1.47 VOLTS EACH. IT COULD BE AFFECTING THE PROPER OPERATION OF THE MACHINE.

NOTE: SHUT OFF POWER WHEN MAKING ANY CHANGES AS BELOW ⑤

FEATURE DIP SWITCHES

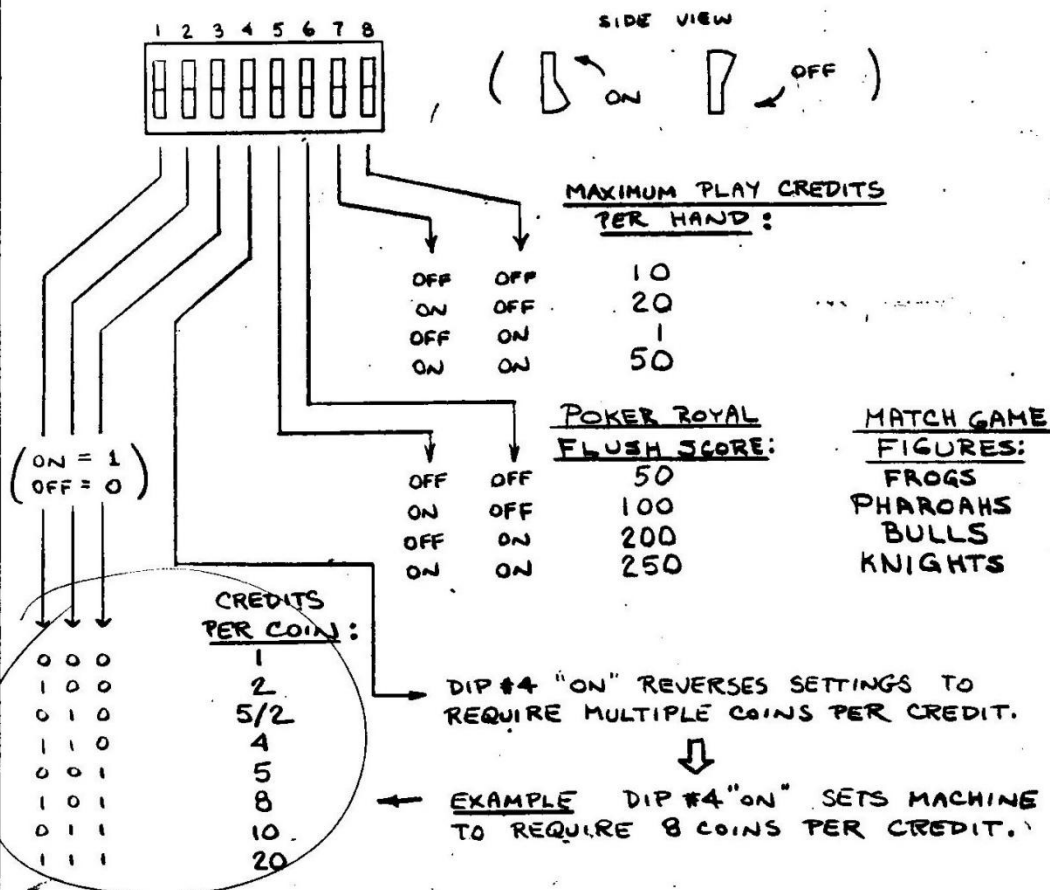

NOTE: DIPS 1-4 SET CREDIT SYSTEM FOR "COIN 1(A)" ONLY. "COIN 2(B)" IS ALWAYS 1 CREDIT PER COIN.

STANDARD FACTORY HOOK-UP IS COIN MECH WIRED TO "COIN 1(A)", "COIN 2(B)" NOT USED. (REFER TO SCHEMATICS)

OPTION "S": COIN MECH WIRED TO "COIN 2(B)", REMOTE SWITCH CONNECTED TO "COIN 1(A)".

(EXAMPLE - SET DIPS 1-4 FOR 20 CREDITS PER "COIN".

COIN MECH (25¢) GIVES 1 CRED. FOR EACH QUARTER. REMOTE SW. TRIGGERS \$5.00 CREDIT FOR EACH ACTIVATION).

CONSULT FACTORY IF DESIRED.

SIZE

A


"DIP" FEATURE SETTINGS

INC.

SHEET

COLOR MONITOR SETUP INSTRUCTIONS

K4800-K4800

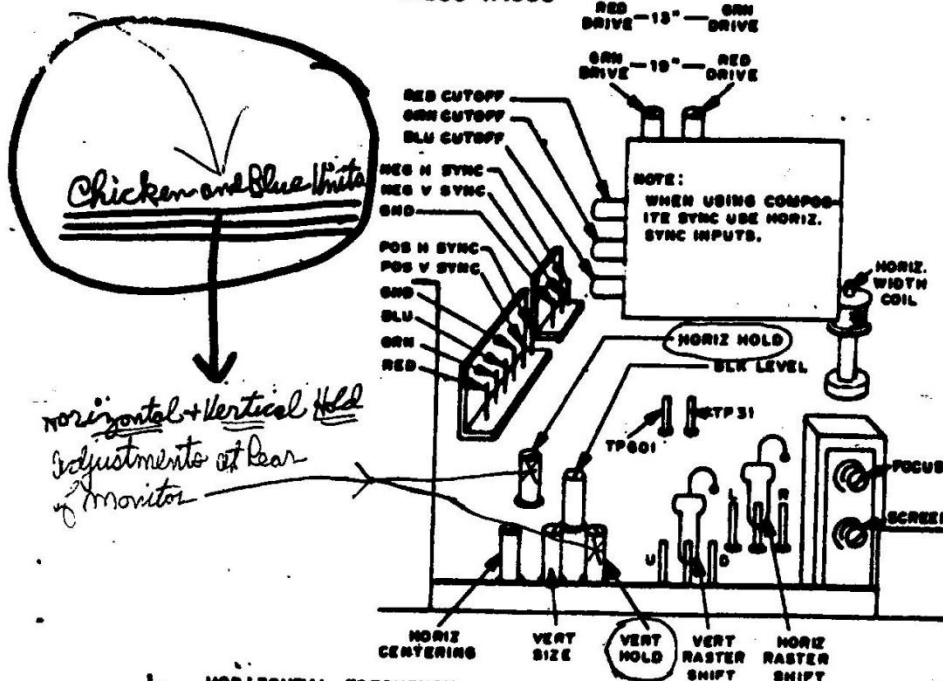

1. HORIZONTAL FREQUENCY

With the monitor being driven from the game signal, connect a jumper between TP601 and TP31. Adjust the horizontal hold control until picture stops sliding horizontally, remove jumper. Do not use the horizontal hold control for horizontal centering. (See #3) NOTE: When game sync is composite, use horizontal sync input.

2. PICTURE SIZE

Adjust the vertical size control, and the horizontal width coil for desired picture size.

3. PICTURE CENTERING

If the video is off center vertically, move the vert raster position adjustment to the up or down position. If the video is off center horizontally, adjust the horizontal video position control to center the picture. If any additional horizontal positioning is required, move horizontal raster position adjustment to the left or right position.

4. BLACK LEVEL

Adjust the black level control to obtain the proper black level (the black portion of the picture just extinguished). Do not use the screen control to set the black level.

5. FOCUS

Adjust the focus control for best overall definition and fine picture detail.