

Host 1 Jumpers

Bluebird may be configured as a dual host system. Two jumpers control the Host 1 communication interface, [Figure 2-11](#). The two options are RS-232 and RS-485, [Table 2-5](#).

Figure 2-11 Host 1 (bottom) and Host 2 (top) jumpers, both set to RS-232.

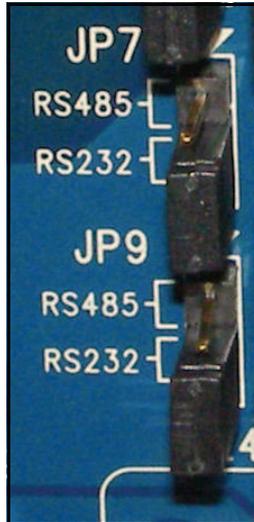


Table 2-5 Host 1 jumpers.

Interface	JP9	JP10
RS-232	Position 2/3	Position 2/3
RS-485	Position 1/2	Position 1/2

Host 2 Jumpers

Two jumpers control the Host 2 communication interface, [Figure 2-11](#). The two options are RS-232 and RS-485, [Table 2-6](#).

Table 2-6 Host 2 jumpers.

Interface	JP7	JP8
RS-232	Position 2/3	Position 2/3
RS-485	Position 1/2	Position 1/2

