

Key to Credit (Key to reset – W2G)

Note: harness from Kiesub is the same for all games. They made the harness a few feet longer to accommodate all games.

Kiesub Part Number 6073508

Also need the double tab (quick disconnect) for the reset lock.



KEY TO CREDIT

W2G



RESET




Yellow / Green Wire (Ground)



To Pin A13 Cabinet I/O or J12 on the Mother board depending on type of game

Game Wiring

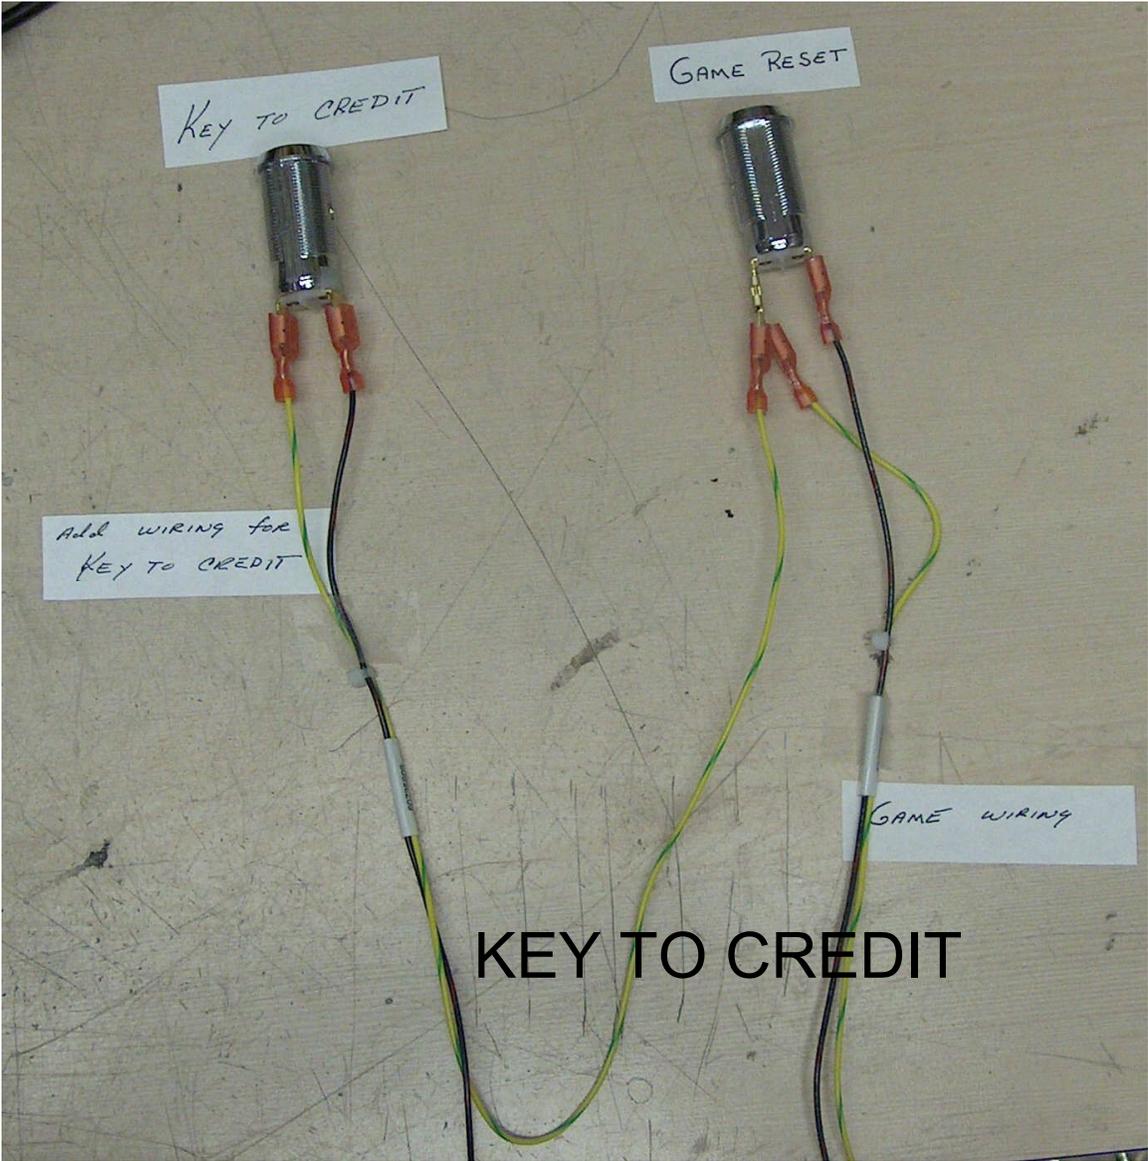

KEY TO CREDIT

GAME RESET

Add WIRING for
KEY TO CREDIT

GAME WIRING

KEY TO CREDIT