



TOUCH SCREEN
CONECTOR J4

1	2	3	4	5
6	7	8	9	10



1	VA AL PIN 3 DE JP1 INTERFACE TOUCH SCREEN
2	VA AL PIN 2 DE JP1 INTERFACE TOUCH SCREEN
3	NC
4	NC
5	SALIDA DE +12V

6	NC
7	NC
8	SALIDA GND PARA INTERFACE TOUCH SCREEN
9	NC
10	VA AL PIN 5 DE JP1 INTERFACE TOUCH SCREEN