

FORTUNE II KENO DIP SWITCHES

1 = ON 0 = OFF

3 2 1 SWITCH NUMBER

0 0 0 = NO DENOMINATION

0 0 1 = 20 CENT

0 1 0 = NO DENOMINATION

0 1 1 = 1 DOLLAR

1 0 0 = 50 CENT

1 0 1 = 25 CENT

1 1 0 = 10 CENT

1 1 1 = 5 CENT

7 ON = NO BALLS

8 ON = SLOWER SPEED