

FORTUNE II DIP SWITCH SETTINGS

DIP SWITCH OPTIONS MOTHER BOARD S1

SWITCH	8	7	6	5	4	3	2	1	
BIT	7	6	5	4	3	2	1	0	
	X	X	X	X	X	0	0	0	5 CENTS
	X	X	X	X	X	0	0	1	10 CENTS
	X	X	X	X	X	0	1	0	25 CENTS
	X	X	X	X	X	0	1	1	50 CENTS
	X	X	X	X	X	1	0	0	\$1
	X	X	X	X	X	1	0	1	NO DENOMINATION DISPLAYED
	X	X	X	X	X	1	1	0	20 CENTS
	X	X	X	X	X	1	1	1	NO DENOMINATION DISPLAYED
	X	X	X	X	0	X	X	X	VOICE OUTPUT
	X	X	X	X	1	X	X	X	NO VOICE OUTPUT
	X	X	X	0	X	X	X	X	NORMAL SCREEN
	X	X	X	1	X	X	X	X	INVERTED SCREEN
	X	X	0	X	X	X	X	X	AUTO SPIN WITH MAX BET
	X	X	1	X	X	X	X	X	PULL HANDLE TO SPIN

X = DONT CARE
0 = ON
1 = OFF

DIP SWITCH OPTIONS PROCESSOR BOARD S1

SWITCH	8	7	6	5	4	3	2	1
	G	G	B	B	B	R	R	R
	R	R	L	L	L	E	E	E
	E	E	U	U	U	D	D	D
	E	E	E	E	E			
	N	N	N					

THESE DIP SWITCHES ARE USED IN ANY COMBINATION TO
PRODUCE THE DESIRED SCREEN BACKGROUND COLOR