

REMOVE PLAYFIELD

To remove the playfield assembly, follow these steps:

1. Open the maindoor.
2. Unplug all playfield cables that are connected to the machine (two harnesses) and cut all cable ties that fixes these cables.

! It is recommended to write down connectors and cable routing before unplugging the cables.

3. Unscrew the knurled nut and remove the upper screw that fixes the playfield motor. Lift the Playfield a bit to remove the screw.
4. Make sure that both harnesses are completely unplugged and unfixed.
5. Remove the cable holding device.
6. Lift the playfield to its upper position and take it out.

Note:

*(for machines manufactured before 2005)
Pay attention not to lose the copper slide bearing bushes which are pinned to the rear of the playfield.*

! It is recommended to carry out this procedure with two persons. One person removes the playfield while the second person guides the cable harnesses through the maindoor cable recess.

Caution!
The playfield assembly is heavy.

