


SOUND CIRCUIT DEAD

Possible;


| | |
|-----|-----------|
| U35 | IDA2030 |
| U36 | 79L05 |
| U37 | 78L05 |
| U38 | TL084CN |
| U39 | AD1851N |
| U40 | SN74HC14N |

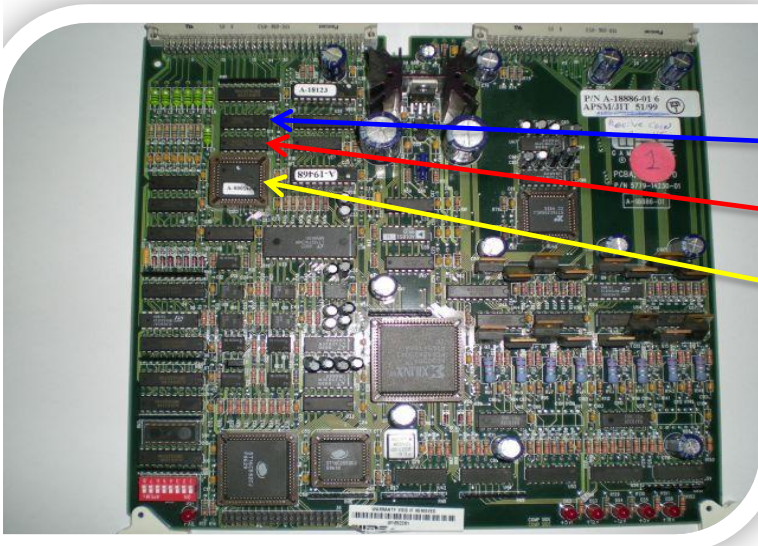

Hard Meters

Possible;


| | |
|------|--------|
| U11 | 74LS05 |
| U12 | 74LS05 |
| XU13 | |

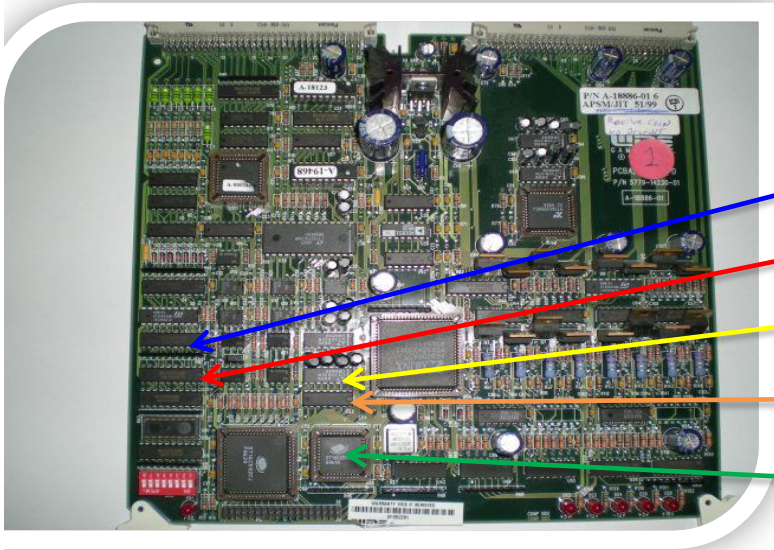

Coin and Bill Acceptor

Possible;


- U5 ULN203A
- U6 SN74LS273N
- U32 LT1081CN
- U33 74LS157
- XU34

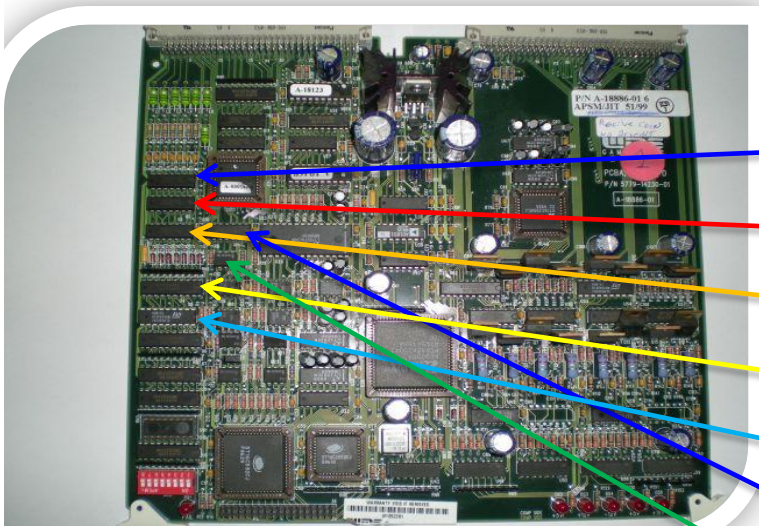

Door Open Switches

Possible;

- U1 74HC00
- U2 74HC00
- U3 74HC00
- U4 74LS244
- U5 ULN203A
- U14 74HC00
- U15 IL2

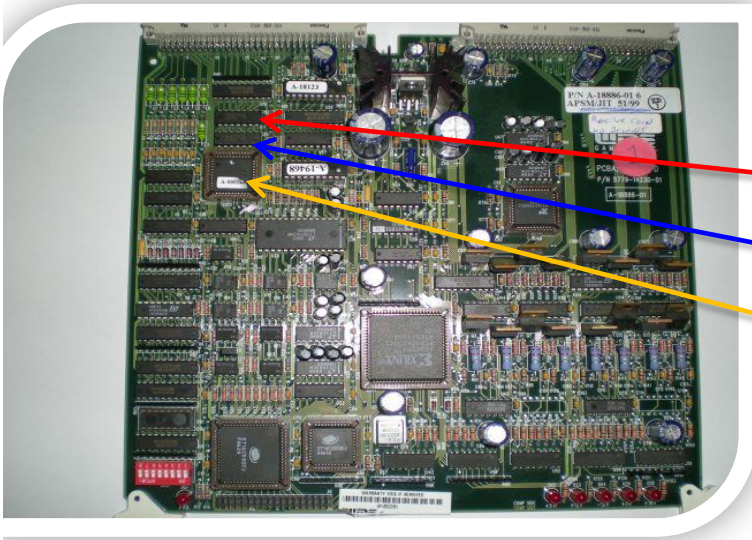

Secure Memory Problems

Possible;

U11 74LS05

U12 74LS05

XU13



Touch Screen Problems

Possible;

U47 74LS273