



### Downloading RFA1.00.24

1. Turn the POWER OFF and remove the top Glass
2. Remove the back cover from the LCD.

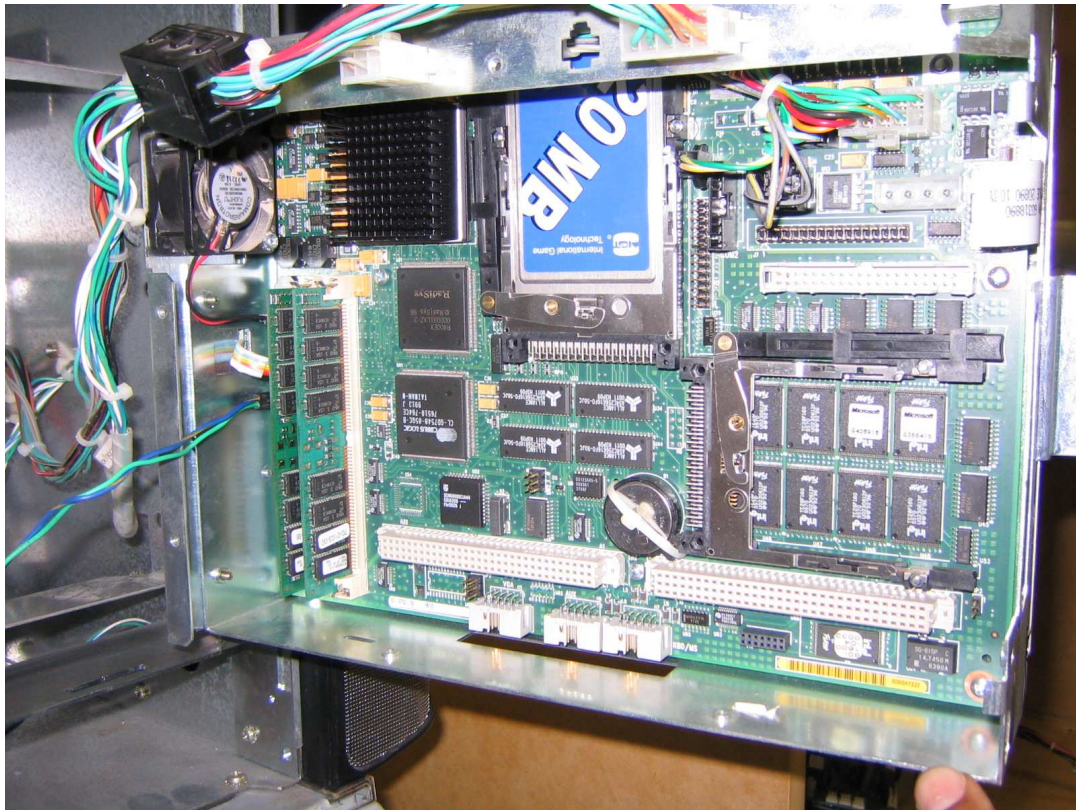


3. Remove the PCMCIA in the top slot of the LCD.
4. Behind the 2 Memory Cards on the bottom left corner you will find Jumper Pins labeled JP1

5. Use a jumper to close the circuit

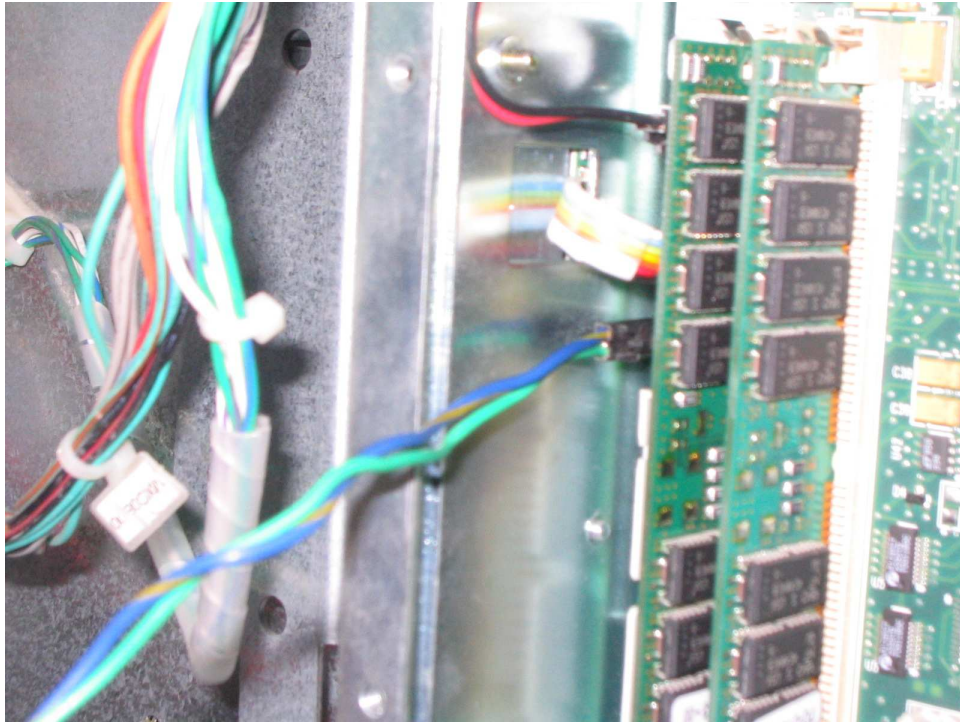


6. Insert the new PCMCIA Card labeled RFA1.00.24 into the top slot of the PCMCIA.
7. Power the machine up

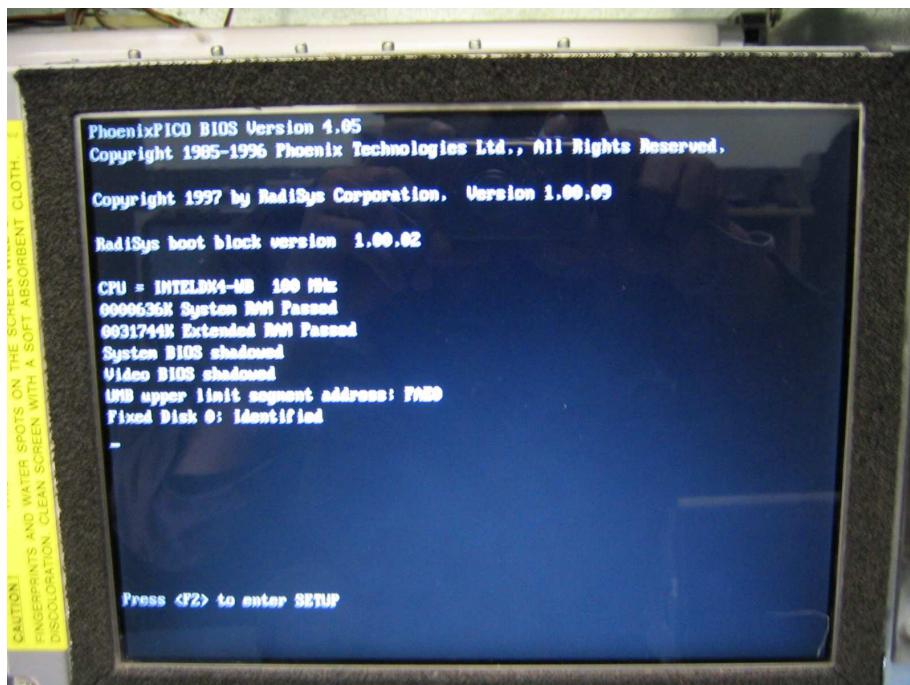



- 
- The image shows a laptop screen displaying a list of Windows XP activation keys. The screen is blue with white text. To the left of the screen, a yellow sticker is visible with text that is partially obscured but appears to be a warning or notice. The laptop is open, and the keyboard area is visible at the bottom.

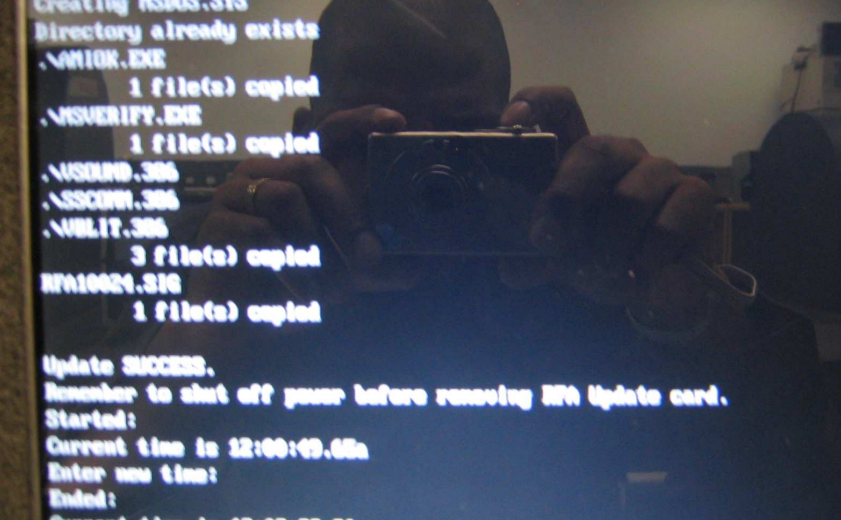- 
- A person is holding a camera up to a computer monitor. The monitor displays a Windows 95 installation log. The text on the screen is as follows:
- Creating IO.SYS  
Creating MSDOS.SYS  
Directory already exists  
.\VBIOS.EXE  
1 file(s) copied  
.\MSVERIFY.EXE  
1 file(s) copied  
.\MSOUND.386  
.\SSCDOWN.386  
.\NHLIT.386  
3 file(s) copied  
HFA10024.386  
1 file(s) copied  
  
Update SUCCESS.  
Remember to shut off power before removing HFA Update card.  
Started:  
Current time is 12:00:49.65a  
Enter new time:  
Ended:  
Current time is 12:02:28.90a  
Enter new time:  
END