


Progressive Mikohn GameKing 19"

GAMEKING 19" J15

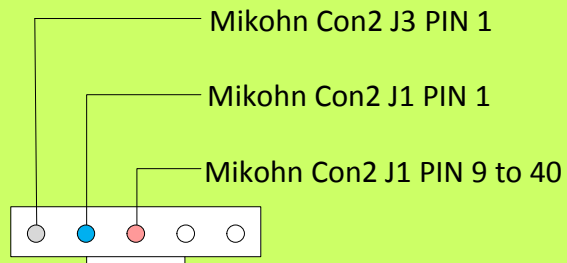

J3

13	KEY	1
14	0	2

1 SERIAL+	2 I/OGND
3 I/OGND	4 I/OGND
5 RXD A-	6 RXD A-
7 RXD A+	8 RXD A+
9 TXD A-	10 TXD A1-
11 TXD A+	12 TXD A1+
13 VI/01F	14 VI/01F

MIKOHN CON2 I

J1

39	33	27	KEY	11	5	1
40	34	28	20	12	6	2

1	I/O GND
2	NC
3	NC
4	NC
5	NC
6	NC
7	NC
8	NC
9	MACHINE SELECT 1
10	MACHINE SELECT 2
11	MACHINE SELECT 3
12	MACHINE SELECT 4
13	MACHINE SELECT 5
14	MACHINE SELECT 6
15	MACHINE SELECT 7
16	MACHINE SELECT 8
17	MACHINE SELECT 9
18	MACHINE SELECT 10
19	MACHINE SELECT 11
20	MACHINE SELECT 12
21	MACHINE SELECT 13
22	MACHINE SELECT 14
23	MACHINE SELECT 15
24	MACHINE SELECT 16
25	MACHINE SELECT 17
26	MACHINE SELECT 18
27	MACHINE SELECT 19
28	MACHINE SELECT 20
29	MACHINE SELECT 21
30	MACHINE SELECT 22
31	MACHINE SELECT 23
32	MACHINE SELECT 24
33	MACHINE SELECT 25
34	MACHINE SELECT 26
35	MACHINE SELECT 27
36	MACHINE SELECT 28
37	MACHINE SELECT 29
38	MACHINE SELECT 30
39	MACHINE SELECT 31
40	MACHINE SELECT 32

PSP

Most important Config for GameKing 19" trimline :

F3: SNGL

F4 : M-05

F6 : JP0

F8 : MS04

Page 1

