


EXCEED / XCITE

RAM CLEAR PROCEDURE

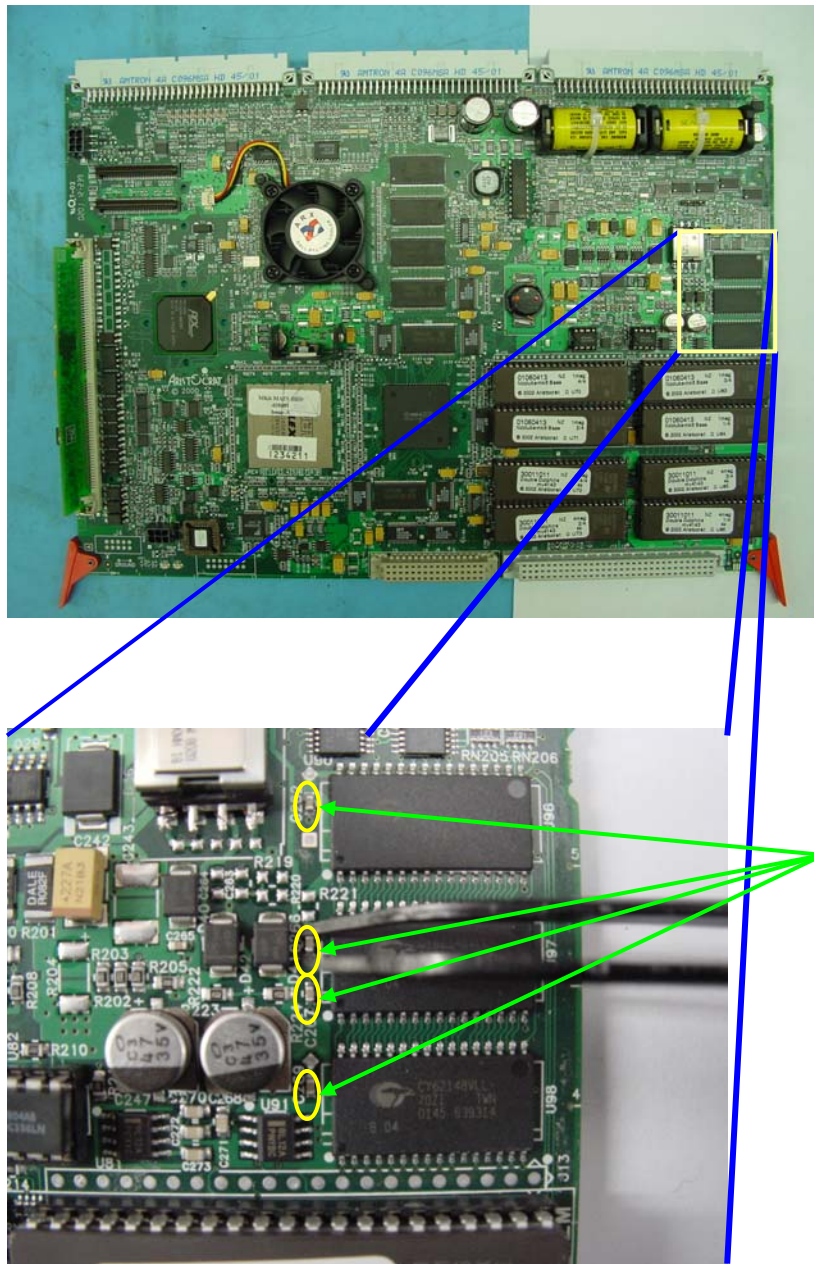

To crash the Mk6 main board these capacitors need to be shorted C269, C267, C266 & C262
Use a pair of tweezers to short the capacitors

The following error messages will scroll at the bottom of the screen:

Memory Error – Self Audit

☐ Memory Error

☐ Memory Error – Machine Options

☐ Memory Error – Game EPROM Changed

☐ Watchdog Reset

OPERATOR MODE MENU

1. Machine Identification
2. Accounting Information
3. Diagnostic Information
4. Test/Diagnostics Mode
5. Operator Setup/Selections
6. Hopper Refill
7. Current Lockup
8. QOGR Protocol Information
9. Lock Audit Screen

Current Credit: \$0.18

Play 1 Line - Press to select next item

Play 3 Lines - Press to select previous item

Play 5 Lines - Press to choose selected item

To reset static ram – open logic door and press Play 1 Line and Take Win
Lockup error to be acknowledged

1. Ensure the **Main Door** and **Logic Cage Door** are **OPEN**.
2. Turn the **AUDIT** key switch on.
3. Press and the **PLAY 1 LINE** and **COLLECT/TAKE WIN** buttons
Simultaneously to reset the static RAM.

MACHINE SETUP

The following screen will appear:

MACHINE OPTIONS

(IMPORTANT: These items can only be changed now, after a memory error reset.)

SERIAL NUMBER???

BUTTON PANEL???

BELLY DOOR PANEL???

DEVICE DRIVER OPTIONS???

SAVE MACHINE OPTIONS

Play 1 Line - Press to select next item

Play 3 Lines - Press to select previous item

Play 5 Lines - Press to change serial number

Follow the on-screen instructions to enter the following:

SERIAL NUMBER = 9 followed by *the last 5 digits (no letters) of the machine serial number*, e.g., *DX12345V* = "912345"

BUTTON PANEL = "14 Buttons" for Xceed and "16 Buttons" for Xcite.

BELLY DOOR PANEL = "No" for xceed, "Yes" for Xcite.

DEVICE DRIVER OPTIONS = This is where you enable/disable note acceptor, touch screen options etc..

5. Move the highlight to **SAVE MACHINE OPTIONS** and press enter (eg, PLAY 5) to save the settings and return to the Main Menu.