

CHERRY MASTER

OPERATION MANUAL


DIP SW (No. 1)		1	2	3	4	5	6	7	8
Not Used									
Hopper Out SW	Active Low		OFF						
	Active High		ON						
Type of Payout	Pay Out SW			OFF					
	Automatic			ON					
7 in W - up	Lost				OFF				
	Even				ON				
W - up Pay Rate	80%					OFF			
	90%					ON			
W - up ON/OFF	ON						OFF		
	OFF						ON		
Bet Max	8 Bet							OFF	OFF
	16 Bet							ON	OFF
	32 Bet							OFF	ON
	64 Bet							ON	ON

DIP SW (No. 3)		1	2	3	4	5	6	7	8
Key In Rate	A Type								
	1coin 50credit	ON	ON						
	1coin 25credit	OFF	ON						
	1coin 10credit	ON	OFF						
	1coin 5credit	OFF	OFF						
Coin A Rate				ON	ON				
	1coin 5credit			OFF	ON				
	1coin 2credit			ON	OFF				
	1coin 1credit			OFF	OFF				
Coin D Rate	C Type								
	1coin 5credit	1coin	2credits			ON	ON		
	1coin 10credit	1coin	1credit			OFF	ON		
	1coin 25credit	2coins	1credit			ON	OFF		
	1coin 50credit	5coins	1credit			OFF	OFF		
Coin C Rate								ON	ON
	1coin 2credit							OFF	ON
	1coin 5credit							ON	OFF
	1coin 10credit							OFF	OFF

DIP SW No.2		1	2	3	4	5	6	7	8
Main Game Pay-Rate	90%	OFF	OFF	OFF					
	85%	ON	OFF	OFF					
	80%	OFF	ON	OFF					
	75%	ON	ON	OFF					
	70%	OFF	OFF	ON					
	65%	ON	OFF	ON					
	60%	OFF	ON	ON					
	55%	ON	ON	ON					
Hopper Limit	300				OFF	OFF			
	500				ON	OFF			
	1000				OFF	ON			
	Unlimited				ON	ON			
Sound ON/OFF Odds over 100	ON						OFF		
	OFF						ON		
Type of Key In	B-Type							OFF	
	A-Type							ON	
Bet Limit for Center Super 7	Unlimited								OFF
	Limited	Number is fixed by No. 4-6							ON

DIP SW (No. 4)		1	2	3	4	5	6	7	8
Credit Limit	Unlimited	ON	ON	ON					
	100,000	OFF	ON	ON					
	50,000	ON	OFF	ON					
	40,000	OFF	OFF	ON					
	30,000	ON	ON	OFF					
	20,000	OFF	ON	OFF					
	10,000	ON	OFF	OFF					
	5,000	OFF	OFF	OFF					
Display of Pay Out Limit	Displayed				ON				
	Undisplayed				OFF				
Type of Coin D	C - Type					ON			
	D - Type					OFF			
Min. Bet for Bonus Play	8 Bet						ON		
	16 Bet						OFF		
Reel Speed	High							ON	
	Low							OFF	
Hopper Out by Coin A	ON								ON
	OFF								OFF

DIP SW (No. 5)		1	2	3	4	5	6	7	8
Disp. Of Doll on demonstration	Displayed	ON							
	Undisplayed	OFF							
Coin In Limit	20,000		ON	ON					
	10,000		OFF	ON					
	5,000		ON	OFF					
	1,000		OFF	OFF					
Condition for 3 Kind of Bonus	3 - 2 - 1				ON	ON			
	6 - 3 - 1				OFF	ON			
	9 - 5 - 1				ON	OFF			
	12 - 7 - 1				OFF	OFF			
Disp. Of Doll at all Fr.&C. Bonus	Displayed						ON		
	Undisplayed						OFF		
Not Used									
Test Mode for Disp. Of Doll									ON
									OFF

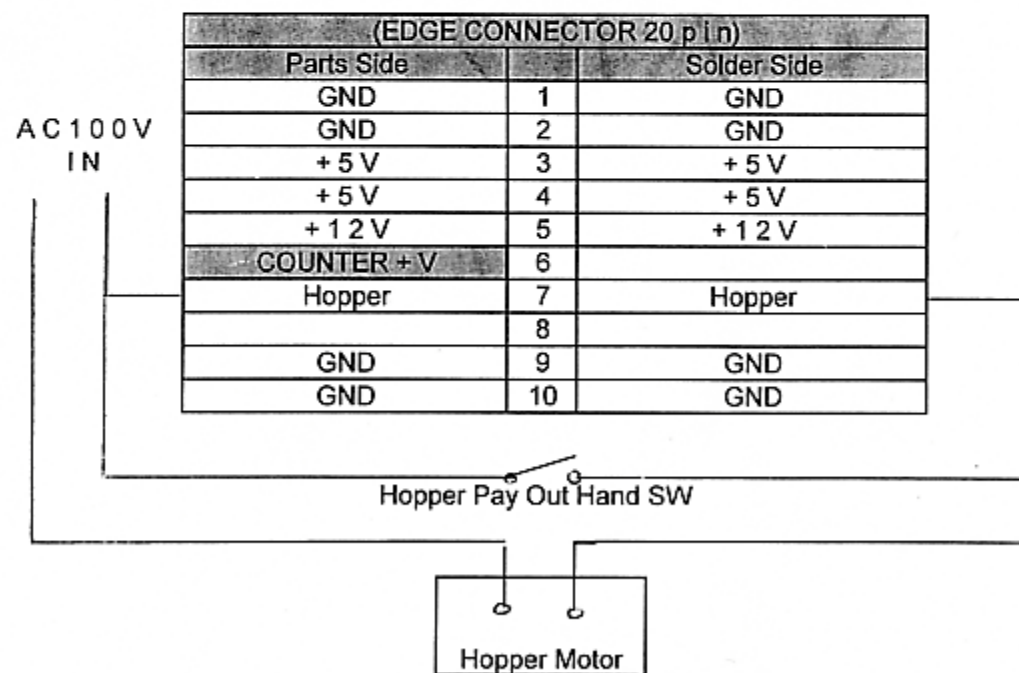

*Counter +V depends on Spec. of voltage. Please connect +5V or +12V.

(EDGE CONNECTOR 72 pin)		
Parts Side		Solder Side
Video RED	1	Video GREEN
Video BLUE	2	Video SYNC.
Speaker	3	SP. GND.
	4	
	5	
	6	
	7	
Service Coin Start	8	
Odds/Small	9	
Bet	10	
Take Score	11	
Double Up	12	
	13	
	14	
	15	
Big	16	
	17	
Coin A	18	Key In
Coin C	19	Coin D (Hopper)
Analyzer	20	Confirm
Pay Out	21	Key Down
Hopper Full	22	Hopper SW
Counter A	23	
Counter B(Key In)	24	
Counter C	25	
Counter D (Hopper)	26	
Hopper Counter	27	Lack of Hopper Counter
Key Down Counter	28	
Start Lamp	29	
Cancel Lamp	30	
Bet Lamp	31	
Take Score Lamp	32	
Double Up Lamp	33	
	34	
	35	
GND.	36	GND.