



# POCKET GUIDE



DOC-PKTGD-0014  
Pocket Guide

©2004 Bally Gaming and Systems

1-877-GO-BALLY  
(702) 896-7772

6601 South Bermuda Road  
Las Vegas, NV 89119

# Table of Contents

---

## **Malfunction and Game Codes 5**

### **Malfunction Flash Codes 7**

01 Model Information	8
02 Output	8
03 Input	10
04 Hopper/Printer Test	11
05 Reel Function Test	11
06 Reel Tape Test	12
07 Reel Tilt and System Reset Records	12
08 Slot Communications	12
09 Display Test	12
10 Payout Test	12
11 Game Optioning	13
12 Peripherals	18
13 Data Vault™ Records	19
15 Hopper Dump	20
16 Topbox Test	20

### **Machine Meter Groups 22**

### **Switch Functions 21**

00: Model Information	22
01: Bookkeeping	23
01: Bookkeeping (MC=3 or MC=4)	25
01: Bookkeeping (MC=16)	25
02: Win Records	26
03: Game Recall	26

# Table of Contents (Cont.)

---

04: Game Summary	26
05: Bill Acceptor Records	26
06: Bill Acceptor Transaction History	27
07: Progressive Jackpots	27
08: Current Progressive Values	27
09: Host EFT History	28
10: Host EFT Totals	29
11: Doors (MC=8)	29
12: Secondary Game Bookkeeping	29
13: Data Vault™ Bookkeeping System	30
14: Voucher Out Transaction History	30
15: Coinless Payment System Transaction Records	30
16: Voucher In Transaction History	31
17: Meter Dump	31
18: SAS® General Meters	32
19: NGCB Bookkeeping Meters	32
20: NGCB Bill Meters	33
21: Payback Percentage Display	33
22: Fund Transfer History	33

## **Jumper Configuration 34**

Bill Acceptor	35
---------------	----

## **DIP Switch Selections 35**

Denomination	35
Market Code (Jurisdiction)	37
Reel Map-Win Table	39

# Table of Contents (Cont.)

---

Secondary Device Protocol	39
Special Features	40
<b>SafeRAM™ Clear Procedure</b>	<b>41</b>
<b>Tower Light Settings</b>	<b>42</b>
<b>Progressive Settings (External) Mikohn®</b>	
<b>Link</b>	<b>43</b>
<b>Jumper Configuration</b>	<b>44</b>
<b>DIP Switch Operation</b>	<b>47</b>
<b>EEPROM Options</b>	<b>48</b>
Current Jurisdiction	48
<b>Denomination Format</b>	<b>49</b>
<b>Accounting Sub Menu</b>	<b>49</b>
Game Magic® (V8000)	50
EVO® (V8700) / EVO® Hybrid (S8700)	50
Bookkeeping and Event Counters	51
<b>SafeRAM™ Clear Procedure</b>	<b>53</b>
<b>Tower Light Settings</b>	<b>53</b>
<b>Progressive Settings (External) Mikohn®</b>	
<b>Link</b>	<b>55</b>
<b>Notes</b>	<b>56</b>



## Malfunction and Game Codes

#	Code
20	Coin in Jam
21	Inappropriate Coin In
22	Invalid Coin
23	Coin Not Sensed
24	Coin Reverse
50-26 <sup>1</sup>	Bill Paused
50-27 <sup>1</sup>	Bill Jam
50-29 <sup>1</sup>	Bill Acceptor Communication Error
30	Hopper Overpay
31	Hopper Coin-Out Jam
32	Hopper Empty
33	Reset During Payout
5x-36 <sup>1</sup>	Printer Failure
5x-37 <sup>1</sup>	Printer Jammed
5x-38 <sup>1</sup>	Printer Empty
5x-39 <sup>1</sup>	Printer Low3
40	Reel Initialization Error
41	Reel #1 Improper Spin
42	Reel #2 Improper Spin
43	Reel #3 Improper Spin
44	Reel #4 Improper Spin
45	Reel #5 Improper Spin
50	Slot Door Open
51	Belly Door Open
52	Bill Acceptor Stacker Access
53	Lower Door Open (Slant)
54	Drop Door Open
55	Bill Acceptor Stacker Removed
56 <sup>4</sup>	Logic Door Access with Power On
57 <sup>4</sup>	System (sView/Tahoe) Door Access with Power On
58 <sup>4</sup>	Latched Door Detector Bord Low Battery
60	Reset During Bill Change
65	Mechanical Meter Disconnect
70	Door Open During Reel Spin
71	Reel #1 Movement
72	Reel #2 Movement



## Malfunction and Game Codes

#	Code
73	Reel #3 Movement
74	Reel #4 Movement
75	Reel #5 Movement
77	Secondary Device Communication Fault During Game/Topbox Wheel Feature Tilt
80 <sup>2</sup>	ROM Checksum Error
81 <sup>2</sup>	Battery Low
82	Door Open with Power OFF
83 <sup>2</sup>	SafeRAM™ Error
83F	SafeRAM™ Format Error
83F-0	Invalid SafeRAM™ EPROM
83F-1	Invalid Main EPROM
83F-2	Invalid Personality EPROM
83F-3	Invalid Coin Denomination
84 <sup>2</sup>	RAM Error
85	MPU Removed with Power Off
88	Catastrophic Failure
89	Cashout to Host Error
90	Display error
91	Communication Error
91-0	No Communication
91-1	Serial Checksum Error
91-2	Optioning Error
91-4	Mystery Progressive Hit during Game Over
91-5	Jackpot Missing
91-7	Game Error Lockout
91-8	Host Defined Lockout in Configuration
91-9	Game in Host Configuration
91-A	Game Not Configured
91-B	Game In Host Disabled
91-C	Host Disabled for Timeout
91-D	Host Disabled for Status
91-E	Event Log Full
91-FF	Feature Fault
91nC	No Communication between Machine and Topbox
91 JP/Pd	The Result from a Key Switch Activation after a Code 86 Lockup Condition



## Malfunction and Game Codes

#	Code
EP	Awards Available but not Acknowledged by Controller
EP	
HP	
HdiS	Communication Loss
99	Severe Failure (recoverable)

\*Door Codes: 50=Main Door, 51=Belly Door, 52=Bill Acceptor Cash Box Door, 53=Slant Lower Door, 54=Drop Door, 55=Bill Acceptor Cash Box.

\*Malfunction codes with prefix "5x" appear only while the door is open.

\*Malfunction codes 80, 81, 83, and 84 are part of the machine self-test during power on or a system reset. Upon an error, all of the machine's lamps flash. The lamps flash one or more times per second depending on the problem.

\*The tower service light will flash for  $\frac{1}{2}$  second every 2  $\frac{1}{2}$  seconds.

\*Requires Latched Door Detector Board for proper operation.

The following codes pertain to West Virginia only:

#	Code
91-p	SAS Poll Timeout
91-d	Game in ROM Signature Calculation
91-b	Game Locked Out by the Host

## Malfunction Flash Codes

A memory tilt will generate an 8x code and flash tower and button lamps at a coded rate.

Error	Flash Rate (Per Second)	Location
Main EPROM Checksum Error	1	U28 / U43
Supplement Main EPROM Checksum Error	N/A	N/A
Personality EPROM Checksum Error	2	U18 / U20
Volatile RAM Write/Read Failure	3	U30 / U45
Non-Volatile RAM (SafeRAM™) Write/Read Failure	4	U30 /U45
Battery Low	Continuous	BAT1
SafeRAM™ Clear Completed	Continuous	N/Z

A hopper 31 tilt will flash the hopper control board LED's.

Hopper LED	Error Description
Green (FWD) LED Flashing	A reverse entry condition occurred. The dual optic switches detected an incorrect direction of coin travel and notified the microcontroller.
Red (REV) LED Flashing	A coin reverse condition occurred. The dual coin-out optic switches detected an incorrect transition while trying to clear a coin jam.
Red/Green LED's Flashing	An external light source struck the optic switch. The optic switches are modulated and an out-of-phase light source was detected.



## Diagnostic Tests and Functions

Test	Diagnostic
01	Model Information
02	Output Test
03	Input Test
04	Hopper Test
05	Reel Function Test
06	Reel Tape Test
07	Reel Tilt Records

Test	Diagnostic
08	Slot Communications
09	Display Test
10	Payout Test
11	Game Optioning
12	Peripherals Test
13	Data Vault™ Meters
14	Memory View

### 01 Model Information

Description	Code
Personality EPROM ID	10d
Payback Percentages (Nominal and/or Basic Percentages)	11d
Reel Map and Win Table	12d
Market Code	13d
Diverter Optic	14d

Description	Code
Crazy Reels	15d
Bill Acceptor	16d
Denomination	17d
WBA CRC Checksum	18d
Time and Date	19d

### 02 Output

Port	Bit	Output Description	Output Voltage
0	0	Top Tower Lamp	6.5 VAC
0	1	Bottom Tower Lamp	6.5 VAC
0	2	Bill Acceptor Ready	6.5 VAC
0	3	Bill Acceptor Not Ready	6.5 VAC
0	4	Coin Accepted Lamp	6.5 VAC
0	5	Insert Coin Lamp	6.5 VAC
0	6	Hold 3 Lamp	6.5 VAC
0	7	Hold 4 Lamp	6.5 VAC
0	8	Hold 5 Lamp	6.5 VAC
0	9	Coin 8 / Hold Attract Lamp	6.5 VAC
0	A	Coin 7 / Hold 2 Lamp	6.5 VAC
0	B	Coin 6 / Hold 1 Lamp	6.5 VAC
0	C	Cash/Credit Lamp	6.5 VAC
0	D	Bet One & Bet Max Lamps	6.5 VAC
0	E	Spin Lamp	6.5 VAC



## Diagnostic Tests and Functions

### 02 Output

Port	Bit	Output Description	Output Voltage
0	F	Change Lamp	6.5 VAC
1	0	Coin 1 Lamp	6.5 VAC
1	1	Coin 2 Lamp	6.5 VAC
1	2	Coin 3 Lamp	6.5 VAC
1	3	Coin 4 Lamp	6.5 VAC
1	4	Coin 5 Lamp	6.5 VAC
1	5	Middle Tower Lamp	6.5 VAC
1	6	4th Tower Lamp	6.5 VAC
1	7	Jackpot Bell	6.5 VAC
1	8	Feature 1 Lamp	6.5 VAC
1	9	Feature 2 Lamp	6.5 VAC
1	A	Feature 3 Lamp	6.5 VAC
1	B	Feature 4 Lamp	6.5 VAC
1	C	Feature 5 Lamp	6.5 VAC
1	D	Feature 6 Lamp	6.5 VAC
1	E	Feature 7 Lamp	6.5 VAC
1	F	Feature 8 Lamp	6.5 VAC
2	0	Coin Deflector Solenoid	+24 VDC
2	1	Total In Meter	+24 VDC
2	2	Total Out Meter	+24 VDC
2	3	Combined Drop Meter	+24 VDC
2	4	Attendant Paid Meter	+24 VDC
2	5	Bill Hopper Motor	+24 VDC
2	6	Spare Meter	+24 VDC
2	7	Coin Mechanism Enable	+24 VDC
2	8	Jackpot 1 Relay	+24 VDC
2	9	Jackpot 2 Relay	+24 VDC
2	A	Jackpot 3 Relay	+24 VDC
2	B	Tilt Relay	+24 VDC



## Diagnostic Tests and Functions

### 02 Output

Port	Bit	Output Description	Output Voltage
2	C	Tivoli Lamps (chase lights for Millionaire Sevens)	+24 VDC
2	D	Total In Relay	+24 VDC
2	E	Game Door Open Signal	+24 VDC
2	F	Handle Release Solenoid	+24 VDC
3	0	Auxiliary Sound D0 Signal	+5 VDC
3	1	Auxiliary Sound D1 Signal	+5 VDC
3	2	Auxiliary Sound D2 Signal	+5 VDC
3	3	Auxiliary Sound D3 Signal	+5 VDC
3	4	Auxiliary Sound D4 Signal	+5 VDC
3	5	Auxiliary Sound D5 Signal	+5 VDC
3	6	Auxiliary Sound D6 Signal	+5 VDC
3	7	Auxiliary Sound D7 Signal	+5 VDC
3	8	Total In Signal	+5 VDC
3	9	Jackpot 1 Signal	+5 VDC
3	A	End of Game Signal	+5 VDC
3	B	Door Switch Signal	+5 VDC
3	C	Key Switch Signal	+5 VDC
3	D	Jackpot 2 / Auxiliary Hopper Signal	+5 VDC
3	E	Reserved	
3	F	Reserved	

### 03 Input

Bill Acceptor Test: Insert a bill. It will be returned. An invalid bill is rejected with nothing displayed. A valid, accepted bill shows denomination and credits. A valid rejected bill shows the following codes:

Code	Description
8A	Rejected by the machine
8B	Rejected by bill acceptor

Code	Description
8C	Failure: Abnormal
8D	Stacker Full

Coin Acceptor Test: An inserted coin displays 09. Each coin is counted. A malfunction displays 0A.



## Diagnostic Tests and Functions

### 03 Input

Port	Bit	Input Description
0	0	HOLD 1 Switch
0	1	HOLD 2 Switch
0	2	HOLD 3 Switch
0	3	HOLD 4 Switch
0	4	HOLD 5 Switch
0	5	Hopper Low (Probe) Switch
0	6	Coin Out Switch
0	7	Meter Detection
0	8	Belly Door Switch
0	9	Coin Credit Signal
0	A	Coin Error Signal
0	B	CHANGE Switch
0	C	SPIN Switch
0	D	BET ONE Switch
0	E	BET MAX Switch
0	F	CASH/CREDIT Switch
1	0	Bill Door Switch
1	1	Drop Door Switch
1	2	Key Switch

Port	Bit	Input Description
1	3	Hopper Full (Probe) Signal
1	4	Bill Acceptor Busy Signal
1	5	Handle Signal
1	6	Stacker Signal
1	7	Tournament Switch
1	8	Bill Hopper Bill Out Signal
1	9	Bill Hopper Diverter Signal
1	A	Bill Hopper Present Switch
1	B	Bill Hopper Mid Signal
1	C	Bill Hopper Cassette In Switch
1	D	Bonus Trigger
1	E	Bill Hopper Rear Signal
1	F	Reserved
2	3	"Knockoff" Switch
2	4	Coin Mech Switch
2	6	Slant Door
2	9	Pseudo Coin Button
2	B	Drop/Diverter Optic


### 04 Hopper/Printer Test

HOPr—The hopper attempts to pay out 10 coins.

PrIN—The printer will dispense a voided coupon or voucher.

### 05 Reel Function Test

The reels index to the "0" position, then spin and stop at the highest number reel position.

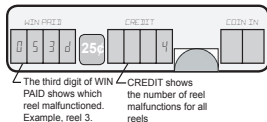

**Note:** Holding CHANGE when entering Test #5 initiates a reel calibration and store the reel-stop center position in SafeRAM™.



## Diagnostic Tests and Functions

### 06 Reel Tape Test

The reels slow-spin to position 0 and stop. After a pause the reels simultaneously advance to position 21. The CREDIT display shows the reel position. The sequence continues until this test is exited.

### 07 Reel Tilt and System Reset Records (Requires Key Switch)

Tilt	Description
2	Reels moving improperly
4	Accelerating Improperly
5	Running improperly
6	Decelerating improperly
7	Reels in wrong position

Tilt	Description
8	Power Fail Resets
9	Door Resets
A	Hardware Resets
B	CPU Error Resets

### 08 Slot Communications

Port	Duart	Name	Location	Connector	Jumper
0	1A (U38)	Link RS-485	Backplane Board	J14	CBL-30284-0001
1	1B	Auxiliary	MPU Board	J3	CBL-30293-0001
2	2A (U39)	Bill Acceptor	Backplane Board	J4	CBL-20243-0001
3	2B	System	Backplane Board	J10	CBL-30298-0001
4	3A (U37)	Spare RS-232	Backplane Board	J18	CBL-30283-0001
5	3B	Spare RS-485	Backplane Board	J15	CBL-20239-0001

### 09 Display Test

Observe to make sure all LED segments in each of the 10 display positions are properly functioning.

### 10 Payout Test

After selecting the reel positions, press BET ONE to select the number of credits to wager. Press SPIN. The CREDIT display shows the win for the reel-symbol combination, the wager, and the credits to be paid from the hopper.

Repeat the procedures above to confirm payouts for any reel combination and wager.



# Diagnostic Tests and Functions

## 11 Game Optioning

#	Option	Setting	Description
27	Bet Mode	(0001)	Credit game
		0003	Coin to credit
		0000	No rebet, no autospin
26	Rebet-Autospin	(0001)	No rebet, autospin at maximum credits
		0002	No rebet, autospin at maximum coins or credits
		0003	Rebet, no autospin
		0004	Rebet, autospin at maximum credits
		0005	Rebet, autospin at maximum coins or credits
09	Jackpot Bell	0000	No Bell
		0001	Bell rings on all wins
		0002	Rings on wins of 20 +
		0003	Rings on wins of 50 +
		0004	Rings on wins of 100 +
		0005	Rings of wins of 200 +
		(0006)	Rings on wins causing lockup
10	Coin Denomination  (Read-Only; Coin Denomination is set by DS2, Sw1, 2, 3, and 4.)	0000	500
		0001	250
		0002	100
		0003	50
		0004	25
		0005	20
		0006	10
		0007	5
		0008	2
		0009	1
		0010	0.5
		0011	0.25
		0012	0.2
		0013	0.1
		0014	0.05
		0015	0.01
		0016	4
		0017	2.5
11	Change Coin/Credit	0000	Coins from hopper
		(0001)	Credits to CREDIT meter
02	Progressive Type	(0000)	OFF Lockup Jackpots for Awarding Prizes
		0001	SPL Serial Progressive Link
		0002	PPL Parallel Progressive Link
		0003	MAPS® Multi Area Progressive System
		0004	SMPi Serial Multiplex Progressive Interface
		0005	MPI Multiplex Progressive
		0006	SAS® Progressive V3.xx
		0007	OTT Over the Top
		0008	SAS® Progressive V4.xx



# Diagnostic Tests and Functions

## 11 Game Optioning (cont.)

#	Option	Setting	Description
07	Number of External Jackpots	(0000)	None
		0001	One
		0002	Two
		0003	Three
		0004	Four
18	Jackpot 4 Signal	(0000)	Combination of 2 and 3
		0001	Combination of 1 and 2
		0002	Combination of 1 and 3
		0003	Combination of 1, 2, and 3
		0004	Discrete Serial (Mikohn®)
80	Test 2 and 10 Enable	(0000)	OFF
		0001	Test 2 Output to Electromechanical Meters OR Test 10 External Jackpot Signal
01	Tournament Minutes	(0000)	OFF
		0001-0099	Minutes of tournament
47	Attract Feature	0000	OFF
		(0001)	ON
38	Reel Stop Sound	(0000)	Sound from speaker
		0001	Handle solenoid click
48	Tower Configuration	(0000)	This Option has specialized settings. See Module 2, Setup and Operations.
		0001-0007	
50Hi	Machine ID	(0000)	Upper four digits of eight-digit identification number.
		0000-9999	
50Lo	Machine ID	(0000)	Lower four digits of eight-digit identification number.
		0000-9999	
54	Coin Hopper Pay Amount	(0000)	Amount paid from hopper upon a lockup under settings 56 Credit Lockup and 51 Credit Limit
		0000-9999	
56	Credit Collect Lockup	(0800)	Number of credits for a lockup upon any collect.
		0000-9999	
62	Tournament Kitty	(0000)	Starting amount of credits for tournament operation.
		0000-9999	
63	Reset Prog. Amt.	(0000)	Credits added to counter upon progressive jackpot reset (MC=3 or MC=4)
		0000-9999	
78Hi	SAS® ID	(0000)	None
		0001-9997	SAS® 3.x, 4.x, 5.x/GRIPS®
		9998	Coin Free (MC=6)
		9999	Non-Cashable Credits
78Lo	Machine Number	(0000)	S/MPI ID number (must match progressive controller)
		0000-0032	



# Diagnostic Tests and Functions

## 11 Game Optioning (cont.)

#	Option	Setting	Description
04	Even Handpay - Collect Lockup	(0000)	OFF
		0001	Even handpay by 10's
		0002	Even handpay by 100's
		0003	Even handpay by 1000's
		0004	Pays to next 1.00
51	Credit Top Limit	(0800)	Maximum number of credits allowed on CREDIT meter.
		0000-9999	Follows Option 56 by default.
03	Tournament Seconds	(0000)	Seconds for tournament
		0001-0059	
22*	Tokenization (All Markets except 16 and 30 - See Below)	(0000)	OFF
		0001	1.0 Token
		0002	0.50 Token (MC=27)
		0003	5.0 Token (MC=27)
22	Second Coin Denomination (MC=16 only)	(0001)	1.0 Wager Coin (1:1)
		0002	0.50 Wager Coin (1:2)
		0003	0.20 Wager Coin (1:5)
		0004	0.10 Wager Coin (1:10)
		0005	0.05 Wager Coin (1:20)
22	Tokenization (MC=30)	(0001)	\$2 Token
		0002	\$5 Token
		0003	\$10 Token
		0004	\$100 Token
22	Tokenization (MC=31)	0001	\$1.00 Token - supports 1¢ - 50¢
		0002	\$10.00 Token - supports 1¢ - \$5.00
22	Tokenization (MC=21)	0001	\$1000 Token - supports all denomination values for MC=21
15	Residual Credits	(0000)	Residual credits must be played.
		0001	Residual credits forced to an Attendant pay.
70 71 72	MAPS® Progressive Cabinet ID	0000	ID can be represented as xxxxyyyzzzz where Option 70=xxx, Option 71=yyy, and Option 72=zzz
58	Win Lockup Limit	(0800)	Amount of win for a lockup. Follows Option 56 by default. Must be greater than Option 57 SAS® Lockup if SAS® is enabled.
		0000-9999	
06	Progressive Group ID	(0000)	SAS® Progressive V4.xx Group ID.
		0000-0255	
57	SAS® Lockup	0800	A win that is less than the setting of Option 58 and greater or equal to the setting of Option 57 causes a win lockup that is released by the Host Accounting System. Option 90, Host Remote Jackpot Release, must be set to enable this option.
		(0000)-9999	
12	Win Lockup Credit Release	(0000)	OFF
		0000-9999	Win lockup credits lower than the setting of Option 12 which are added to CREDIT meter by actuation of a second key switch.
90	Host Remote Jackpot Release	(0000)	OFF
		0001	Lockups may be released by Host.
91	Host Queue	(0000)	No queue
		0001	Multiple lockups queued for processing



# Diagnostic Tests and Functions

## 11 Game Optioning (cont.)

#	Option	Setting	Description
95	Voucher Denomination Mismatch	(0000)	Redeemable vouchers must be evenly divisible by the machine's denomination to be accepted by the machine.
		0001	Machine will accept all vouchers and print a change voucher for odd amount.
73	Voucher Validation Level	0000	Standard
		0001	Host enhanced validation
		0002	Host secure enhanced validation
		(0003)	Host system validation
76	Voucher Receipt Enable	(0000)	Printer dispensed only redeemable vouchers.
		0001	Printer dispenses redeemable vouchers and informational receipts.
61	Machine Directed Payment Configuration	(0001)	Hopper
		0002	Seiko® PSA™ printer
		0003	Seiko® PSA™ printer and hopper
81	Coin Acceptor Enable	0000	No coin acceptor
		(0001)	Coin acceptor enabled
74	Voucher Expiration	0000	No expiration
		(0001)-0255	Days before voucher expires
	MC=(00)	0000	No expiration
		(0030)-0255	Days before voucher expires
64	Minimum Voucher Pay	8000	Fewest credits that will be paid by voucher
		(0000)-9999	
67	Maximum Voucher Pay	(8000)	Most credits that will be paid by voucher
		0000-9999	
14	Even Voucher Pay	(0000)	OFF
		0001	Pay by 1.00
		0002	Pay by 2.00
		0003	Pay by 5.00
		0004	Pay by 10.00
		0005	Pay by 20.00
		0006	Pay by 50.00
		0007	Pay by 100.00
		0008	Pay by 200.00
		0009	Pay by 500.00
		0010	Pay by 1000.00
77A 77B 77C	Site Location Label	(0100)	Allows the operator to enter three lines of address printed on vouchers
		0000-0047	
08	Credit Snap	(0000)	Wins added incrementally to the CREDIT meter
		0001	Wins over 20 added as a sum to the CREDIT meter



# Diagnostic Tests and Functions

## 11 Game Optioning (cont.)

#	Option	Setting	Description
05	Even Handpay - Win Lockup	(0000)	Off
		0001	Even handpay by 10's
		0002	Even handpay by 100's
		0003	Even handpay by 1000's
		0004	Pays to next 1.00
20	Extra Coin	(0000)	Extra coins returned to the Player
		0001	Extra coins applied to wager for next game (MC=16 locked default)
68	Game Sounds	0000	Internal device
		(0001)	External sound board (ProSound I or II)
23	GRIPS® Host	(0000)	No GRIPS® Host or MC=28 without EFT
		0001	GRIPS® Host (Also 78H>0000)
92	SAS® Bonusing (Also 78H>0000)	(0000)	Disabled
		0001	SAS® 5.01 Bonusing
		0002	AFT Bonusing
		0003	Both SAS® 5.01 and AFT Bonusing
98	Primary Host	(0000)	Disabled
		0001	SAS® (Also 78H>0000)
		0002	SDS®
99	Secondary Host	(0000)	Disabled
		0001	SAS® (Also 78H>0000)
		0002	SDS®
69	Coin Acceptor	(0000)	CC-16
		0001	IDX X-20 dual denomination coin acceptance (default if MC=16)
75	Coins to Dispense (MC=16)	(0125) 0000- 1024	Number of coins to dispense for diagnostic (float level)
93	Bank Meter Transfer (MC=16)	(0000)	No transfer to Bank Meter
		0001	Transfer 2£ from Bank to Credit each time a transfer button is pressed
17	Set SAS® Version	(0000)	SAS® 5.01
		0001	SAS® 6.01
19Hi	Asset Number	(0000)	Upper four digits of an eight digit asset number (House ID)
		0000-9999	
19Lo	Asset Number	(0000)	Lower hour digits of an eight digit asset number (House ID)
		0000-9999	
29	Operator Initiated EFT Registration Request	0000	Exit option
		0001	Initiate AFT registration cycle
		0002	Cancel AFT registration cycle
79	VLC Identification	0000 - (4000)	The ID can be represented by numbers 0000-4000, with 4000 being default. VLC Jurisdictions only.
24	Print Promotional/ Restricted Vouchers	(0000)	Disallow printing of Promotional/Restricted Vouchers
		0001	Allow printing of Promotional/Restricted Vouchers

\* Option 22, Tokenization, is displayed only if DIP Switch 3, Switch 6 is turned OFF.



## Diagnostic Tests and Functions

### 12 Peripherals

The last two digits of the CREDIT display show the settings of DIP Switch DS1 in hexadecimal representing the value of the eight switches.

SW 1 & 5	SW 2 & 6	SW 3 & 7	SW 4 & 8	HEX DIGITS 1 <sup>ST</sup> & 2 <sup>ND</sup>
ON	ON	ON	ON	0
OFF	ON	ON	ON	1
ON	OFF	ON	ON	2
OFF	OFF	ON	ON	3
ON	ON	OFF	ON	4
OFF	ON	OFF	ON	5
ON	OFF	OFF	ON	6
OFF	OFF	OFF	ON	7
ON	ON	ON	OFF	8
OFF	ON	ON	OFF	9
ON	OFF	ON	OFF	A
OFF	OFF	ON	OFF	B
ON	ON	OFF	OFF	C
OFF	ON	OFF	OFF	D
ON	OFF	OFF	OFF	E
OFF	OFF	OFF	OFF	F

Win Paid	Credit	Device
121d	Value	DIP Switch DS1 in hexadecimal
122d	Value	DIP Switch DS2 in hexadecimal
123d	Value	DIP Switch DS3 in hexadecimal
124d	Value	Battery voltage in hexadecimal
125d	-0	Bet one Sound at current volume level
125d	-1	Bet Max at full volume (ALARM)
126d	Setting	Current Real Time Clock
127d	E400	Expanded EPROM memory status



## Diagnostic Tests and Functions

### 13 Data Vault™ Records

If a unit is defective, win paid indicates the error as “bbn,” where “n” is the error code.

Sub Group	Name	Description
00	Total In	Increments for each coin or credits wagered.
01	Total Out	Increments for each until won by a Player without a win lockup.
02	Attendant Paid	Increments for each credit paid by an Attendant upon a jackpot lockup.
03	Coin Drop	Increments for each coin diverted to a container because the hopper is full.
04	Door Opens	Times the main door of the machine was opened with power ON.
05	Games Played	Increments once for each completed game.
06	Super Jackpots	Number of times the top awards have been won when Option 07, Number of External jackpots, is greater than 0.

Code	Description
1	No Response
2	Bad Data Transfer
3	No Response and Bad Data
4	Bad CRC

Code	Description
5	No Response and Bad CRC
6	Bad Data and Bad CRC
7	No Response, Bad Data and Bad CRC



## **Diagnostic Tests and Functions**

### **15 Hopper Dump**

If the amount of coins in the hopper is less than the amount set in Option 75, Coins to Dispense, the WIN PAID meter reads X/LESS. "X" being the difference between the amount set in Option 75 and the actual amount of coins in the hopper.

If the amount of coins in the hopper is equal to the amount set in Option 75, the WIN PAID meter reads X/FULL. "X" being the amount set in Option 75.

If the amount of coins in the hopper is more than the amount set in Option 75, the WIN PAID meter reads X/PLUS. "X" being the difference between the actual amount of coins in the hopper, and the amount set in Option 75.

### **16 Topbox Test**

Using a Lucky Wheel machine, Test #16 verifies that all lights are wired and working properly, and that the wheel spins correctly. Each spin of the wheel is displayed in the CREDITS meter (0001-9999), and its reel index is displayed in the COIN IN meter.



## Switch Functions

Switch	Location	Function
CHANGE	Main Door	Activate CHANGE lamp
		Restart or activate some tests
		Exit time and date setting after SafeRAM™ Clear
		Turns off jackpot bell/music during win lockup
CASH/CREDIT PRINT TICKET	Main Door	Cashout/Credits
BET ONE	Main Door	Wagers 1 credit
		Select previous option
SPIN	Main Door	Spin reels
		Pause test display
		Pause meter display
		Change options
		Speeds up addition of all win credits to CREDIT meter
BET MAX	Main Door	Wagers maximum credits
		Select next option, meter, or game
AUDIT KEY SWITCH (Upright)	Right Side or Machine	Displays bookkeeping meters
		Releases jackpot lockup
		Triggers some output tests
AUDIT KEY SWITCH (Slant Top)	Front Panel, Above Door	Displays bookkeeping meters
		Releases jackpot lockup
		Triggers some output tests
2nd KEY SWITCH	Near Audit Key Switch	Selects between revenue or tournament game
		Same as TEST (MC=12)
		Adds or removes credits (International)
		Win lockup credit release (Option 12)
TEST	MPU Assembly	Selects test or function
		Activates next test or function
		Selects level of SafeRAM™ Clear
COIN ACCEPTOR	MPU Assembly	Enable or disable coin acceptor and bill acceptor



## Switch Functions (cont.)

Switch	Location	Function
PSEUDO COIN	MPU Assembly	Simulates coin in while main door is open
		Select next option
		Selects a level of SafeRAM™ Clear
RESET	MPU Assembly	Releases a machine tilt
		Exits test and diagnostics
VOLUME*	MPU Assembly	Adjusts the level of sound
*Not applicable to machines containing ProSound boards. Volume adjustment is located on the ProSound board.		

## Machine Meter Groups

The availability of some machine meter groups depends upon hardware configuration and jurisdiction setting.

#	Meter Group
00	Model Information (MC=3 or MC=4)
01	Bookkeeping
02	Win Records
03	Game Recall
04	Games Summary
05	Bill Acceptor Records
06	Bill Acceptor Transaction History
07	Progressive Jackpots
08	Current Progressive Values
09	SAS® EFT History
10	Host EFT Totals
11	Doors (MC=8)

#	Meter Group
12	Secondary Game Bookkeeping
13	Data Vault™
14	Voucher Out Transaction History
15	Coinless Payment System Transaction Records
16	Voucher In Transaction History
17	TBD
18	SAS® General Meters
19	NGCB Bookkeeping Meters
20	NGCB Bill Meters
21	Payback Percentage Display
22	Fund Transfer History

### 00: Model Information

Seq	Sub Group	Description
1	01	EPROM Program Number
2	02	Reel Map and Win Table (Usually 0000)
3	03	Payback Percentage of the Game
4	04	Main Part Number



## Machine Meter Groups

### 01: Bookkeeping

Sub Group	Meter	Description
00	Total In	Credits wagered.
01	Total Out	Credits won without a win lockup.
02	Coin Drop	Coins sent to a separate container because the hopper was full.
03	Combined Drop	Coin drop plus CHNG bill (Bill Drop — see Bill Acceptor Records meter group).
04	Coin In	Coins accepted by the machine.
05	Coin Out	Coins dispensed by the hopper for credits won.
06	Total Games	Games played. Incremented at the start of each spin.
07	Current Credits	Credits available to the Player when the machine returns to revenue operation.
08	Lockups	Number of times attendant has released a jackpot lockup. Incremented when the Attendant activates the audit key switch.
09	Attendant Paid Credits	Credits paid by an attendant upon a lockup.
10*	Credit Collect Lockup Credits	Attendant paid credits for lockup from setting of Option 56.
11*	Win Lockup Credits	Attendant paid credits for a lockup from the setting of Option 58, Win Lockup (if not SDS® EFT) (Win Hand Paid Credits for a lockup SDS® EFT Only).
12* (10 VLC)	Super Jackpots	Number of times top awards have been won when Option 07>0.
13* (11 VLC)	Door Opens	Number of times the main door of the machine was opened with power ON.
14*	Cash Box Door Opens	Number of times the bill acceptor cash box door was opened with power ON.
15* (12 VLC)	Games Since Door Open	Games played since the last time the door was opened.
16* (13 VLC)	Games Since Reset	Games played since System reset.
17* (14 VLC)	Drop Door Opens	Number of times the drop door has been opened (if drop door switch is connected).
18* (15 VLC)	Partial SafeRAM™ Clears	Number of times the Partial SafeRAM™ Clear Procedure has been executed.
19* (16 VLC)	Full SafeRAM™ Clears	Number of times the Full SafeRAM™ Clear Procedure has been executed.



# Machine Meter Groups

## 01: Bookkeeping (cont.)

Sub Group	Meter	Description
20* (17 VLC)	Extra Coins Sent to Drop	Coins that should have been rejected by the coin acceptor but were diverted into the drop bucket because the hopper was full.
21* (18 VLC)	Soft Attendant Paid	Purchased credits paid by an Attendant. Purchased credits are from a bill transaction, Key On Credits, EFT, ACT, or from coins when 27=03.
22* (19 VLC)	Soft Credit Collects	Coins paid by the hopper from purchased credits.
23* (20 VLC)	Bill Stacker Door	Number of times stacker has been opened with power ON.
24* (21 VLC)	Current Non-Cashable Credits	Current credits (Meter #7) that must be wagered.
25* (22 VLC)	Cashable Coupon/Voucher Credits	Credits from non-government bills that can be paid by the hopper on cashout.
26* (23 VLC)	Non-Cashable Coupon/Voucher Credits	Credits from non-government bills that must be wagered.
27* (24 VLC)	Token Out	For machines with two hoppers, the numbers of tokens dispensed by the second hopper.
28* (25 VLC)	Key On Credits	Credits added by optional Key On key switch.
29* (26 VLC)	Hopper Fills	Coins added to hopper after 32 (hopper empty) tilt recovery.
27* VLC	MPU Access	Number of times MPU board assembly has been removed.
28* VLC	Door Opens with Power OFF	Number of times main door was opened with power OFF
30*	Games Since Power Fail	Games played since power ON.
31	Belly Door Open	Number of times Belly Door and the Top Box door are opened.
32	Slant Style Door Open	Number of times the Lower Door of the Slant cabinet style has been opened.
*Sequence and inclusion depends upon Main software version.		



## Machine Meter Groups

01: Bookkeeping (MC=3 or MC=4)

Sub Group	Meter
00	Total In
01	Coin Drop
02	Total Out
03	Attendant Paid Credits
04	Credit Collect Lockup Credits
05	Win Lockup Credits
06	Total Games
07	Coin In
08	Coin Out
09	Combined Drop
10	Current Credits
11	Lockups
12	Super Jackpots

Sub Group	Meter
13	Door Opens
14	Cash Box Door Opens
15	Games Since Door Open
16	Games Since Reset
17	Drop Door Opens
18	Partial SafeRAM™ Clears
19	Full SafeRAM™ Clears
20	Extra Coins Sent to Drop
21	Soft Attendant Paid
22	Soft Credit Collects
23	Tokens Out
24	Knock-Off Credits
25	Total Win Meter
26	Belly Door Open
27	Slant Style Door Open

01: Bookkeeping (MC=16)

Sub Group	Meter
00	Total In
01	Total Out
02	Coin Drop Credits
03	Combined Drop
04	Extra Coin Credits Sent to Drop
05	Coin-In Credits
06	Coin-Out Credits
07	Games Played
08	Current Credits
09	Door Open
10	Cash Box Door Opens

Sub Group	Meter
11	Drop Door Opens
12	Bill Stacker Door
13	Games Since Door Open
14	Games Since Reset
15	Games Since Power Fail
16	Number of Partial SafeRAM™ Clears
17	Number of Full SafeRAM™ Clears
18	Hopper Fills
19	Belly Door Open
20	Slant Style Door Open



## Machine Meter Groups

### 02: Win Records

The Win Record meter group displays the quantity of wins for each winning reel combination in the Message Center until every possible winning combination has been displayed.

### 03: Game Recall

### 04: Game Summary



See the latest version of the ProSlot Setup and Operations Manual for further description on Meter Groups.

### 05: Bill Acceptor Records

ID Message	Description
1 bill	Number of 1 bills accepted
2 bill	Number of 2 bills accepted
5 bill	Number of 5 bills accepted
10 bill	Number of 10 bills accepted
20 bill	Number of 20 bills accepted
50 bill	Number of 50 bills accepted
100 bill	Number of 100 bills accepted
200 bill	Number of 200 bills accepted (MC=6)
500 bill	Number of 500 bills accepted (International)
ALL coup	Number of coupons.vouchers accepted
CHNG bill	Total credits (or pounds if MC=16) for all bills accepted
CASH bill	Total number of bills currently in the cashbox/stacker (Resets to 0 during soft drop)
CASH coup	Total number of coupons/vouchers currently in the cashbox/stacker (Resets to 0 during soft drop)
AccP doll	Total value in dollars for all bills and coupons/vouchers accepted



## Machine Meter Groups

### 06: Bill Acceptor Transaction History

The sequence of transactions is shown in the left position of WIN PAID, with “1” being the most recent transaction. The remaining positions of WIN PAID show the denomination of the bill, COUP for a coupon or VCHR for a voucher.

CREDIT shows the number of credits given for the transaction. For example, the figure below shows the last transaction was a \$20.00 bill for which 80 credits were given.

### 07: Progressive Jackpots

Sub Group	Description
00	Jackpot One (JP0)
01	Jackpot Two (JP1)
02	Jackpot Three (JP2)
03	Jackpot Four (JP3)
04	Jackpot Five (Mystery machine pay only)
05	Jackpot Six (Mystery machine pay only)
06	Jackpot Seven (Mystery machine pay only)
07	Jackpot Eight (Mystery machine pay only)

### 08: Current Progressive Values

Code	Explanation
Err 0	<b>No serial traffic found within the last 500 milliseconds.</b> The game is not receiving serial data from the progressive controller. This is most likely caused by an open connection between the machine and the progressive controller or incorrect configuration of the progressive controller.
Err 1	<b>Serial checksum error.</b> The data received by the game is not the same data sent by the progressive controller. This can be caused by an intermittent connection or too much noise on the data lines.
Err 2	<b>Option error.</b> Results when Option 02 Progressive Type is set to 0004 and Option 78Lo Machine Number is set to 0000.
Err 3	<b>Coining error.</b> Current Progressive Values are unavailable during a game. Exit the meter group and finish the game. The values will display upon re-entering this meter group.



## Machine Meter Groups

### 09: Host EFT History

Option 98, Primary Host = 0001 (SAS® Host)		
Sub Group	Meter Name	Description
01	Non-Cashable	Credits transferred that must be wagered.
02	Cashable	Credits transferred that could be wagered or cashed out.
03	Promotional	Credits not won or purchased by a Player (Casino Promotion)
04	Forced Cashout to the System	Credits returned to the system when the Player pressed CASH/CREDIT.
05	Forced Cashout from the Hopper	Credits paid in coins by the hopper as instructed by the system from a cashout when the Player pressed CASH/CREDIT.

### 09: Host EFT History (cont.)

Option 98, Primary Host = 0002 (SDS® Host)		
Sub Group	Meter Name	Description
00	Current Promotional Credits	Credits not won or purchased by a Player (Casino Promotion).
01	Promotional Credits Received	Total of all EFT credits sent to the game from the system, which are Promotional Credits (non-cashable).
02	Total EFT In	Total of all EFT credits sent to the game from the system, which are soft, cashable credits.
03	Total EFT Out	Total of all hard/soft EFT credits cashed out to the system because (1) the Player pressed CASH/CREDIT, or (2) a Win to System (Certify Pay) occurred (a prize was won that was too large to pay to the CREDIT meter, so it was directly paid back to the EFT Host system).



## Machine Meter Groups

### 10: Host EFT Totals

SAS® Host EFT Totals	
Sub Group	Meter Name
01	Promotional
02	Non-Cashable (Blocked) Credits
03	Cashable (Non-Blocked) Credits
04	Forced Cashout to the System
05	Credits Won
06	Third from Last Bonus
07	Second from Last Bonus
08	Last Bonus
09	Total Bonus for Tax Status Deductible
10	Total Bonus for Tax Status Non-Deductible
11	Total Bonus for Tax Status Wager Match
12	Last Multiplier Bonus for Tax Status Deductible
13	Last Multiplier Bonus for Tax Status Non-Deductible
14	Total Multiplier Bonus for Tax Status Deductible
15	Total Multiplier Bonus for Tax Status Non-Deductible

### 11: Doors (MC=8)

Sub Group	Description
00	Main Door Access
01	Drop Door Access

Sub Group	Description
02	Bill Acceptor Cashbox Access

### 12: Secondary Game Bookkeeping

Bookkeeping meters for the factory-installed secondary feature game are displayed. The information recorded and displayed depends upon the feature. Consult the documentation for the secondary game for more information.



## Machine Meter Groups

### 13: Data Vault™ Bookkeeping System

Sub Group	Name	Description
00	Total In	Increments for each coin or credit wagered.
01	Total Out	Increments for each unit won by a Player.
02	Attendant Paid	Increments for each credit paid by an Attendant upon a jackpot lockup.
03	Coin Drop	Increments for each coin diverted to a container because the hopper is full.
04	Door Opens	Times the main door of the machine was opened with power on.
05	Games Played	Increments once for each completed game.
06	Super Jackpots	Number of times the top awards have been won when Option 07, Number of External Jackpots, is greater than 0.

### 14: Voucher Out Transaction History

Sub Group	Description
01	Status
02	Date
03	Time

Sub Group	Description
04	Transaction Type/System ID
05	Validation Number
06	Amount

### 15: Coinless Payment System Transaction Records

Sub Group	Description
01	Cashable Coupon Redeemed
02	Non-Cashable Coupon Redeemed
21	Cashable Voucher Redeemed
22	Promotional Voucher Redeemed
23	Cashable Promotional Voucher Redeemed
31	Cashable Voucher with No Lockup
32	Promotional Voucher from Cashout
33	Attendant Pay from Collect Lockup (Receipt Printed)



## Machine Meter Groups

### 15: Coinless Payment System Transaction Records (cont.)

Sub Group	Description
34	Attendant Pay from Win Lockup (Receipt Printed)
35	Attendant Pay from Collect Lockup (No Receipt)
36	Attendant Pay from Win Lockup (No Receipt)
37	Cashable Voucher from AFT Transfer
38	Restricted Voucher from AFT Transfer
39	Debit Voucher fro AFT Transfer

### 16: Voucher In Transaction History

Sub Group	Description
01	Status
02	Date
03	Time

Sub Group	Description
04	Transaction Type/System ID
05	Validation Number
06	Amount

### 17: Meter Dump

METERS DISPLAYED IN ENGLISH	METERS DISPLAYED IN FRENCH
TOTAL IN	ENTREES
TOTAL OUT	SORTIES
HOPPER OUT	TOTAL DE LA TREMIE
NET ATTEN. PAID	NET PAYE PAR EMPLOYE
COIN ACCEPTOR	ACCEPTEUR DE PIECES
TOTAL DROP	RECETTES
ATTEN. PAID	JACKPOT ET LOTS CUMULES
COIN TO DROP	PIECE INSEREE
HOPPER REFILL	REMPLISSAGE DE TREMIE
GAMES PLAYED	JEUX JOUES
GAMES WON	JEUX GAGNE
CREDIT PLAYED	CREDITS JOUES
CREDIT WON	CREDITS GAGNE



## Machine Meter Groups

### 18: SAS® General Meters

Sub Group	Description
00	Machine Paid External Bonus Deductible
01	Machine Paid External Bonus Non-Deductible
02	Machine Paid External Bonus Wager Match
03	Machine Paid External Bonus Payout

### 19: NGCB Bookkeeping Meters

Sub Group	Meter	Description
00	Coin In	Credits wagered, except Double-or-Nothing wagers.
01	Coin Out	Credits won, not including Progressive Awards and Win Lockups.
02	Coin Drop	Credits sent to a separate container because the hopper was full.
03	Physical Coin In	Coins accepted by the machine.
04	Physical Coin Out	Coins dispensed by the hopper.
05	Attendant Paid Jackpots	Credits paid an Attendant for a Win Lockup.
06	Attendant Paid Cancelled Credits	Soft credits paid by an Attendant.
07	Bill In	Credits from currency.
08	Voucher In	Credits from currency from items other than currency.
09	Voucher Out	Credits from currency from items vended to the Player.
10	Electronic Fund Transfer In	Credits transferred electronically from a financial institution.
11	Wagering Account Transfer In	Credits transferred electronically to machine from wagering account.
12	Wagering Account Transfer Out	Credits transferred electronically from machine to wagering account.
13	Non-Cashable Electronic Promotion In	Non-Cashable Credits transferred electronically to machine from a promotional account.
14	Cashable Electronic Promotion In	Credits transferred electronically to machine from a promotional account.
15	Non-Cashable Electronic Promotion Out	Non-Cashable Credits transferred electronically from machine to a promotional account.
16	Cashable Electronic Promotion Out	Credits transferred electronically from machine to a promotional account.
17	Coupon Promotion In	Total accepted credits from coupons.
18	Coupon Promotion Out	Total dispensed credits from coupons.



## Machine Meter Groups

### 19: NGCB Bookkeeping Meters (cont.)

19	Machine Paid External Bonus Payout	Total amount awarded from external bonus, paid by machine.
Sub Group	Meter	Description
20	Attendant Paid External Bonus Payout	Total amount awarded from external bonus, paid by Attendant.
21	Attendant Paid Progressive Payout	Progressive awards paid by Attendant.
22	Machine Paid Progressive Payout	Progressive awards paid by machine.
23	Games Since Power Reset	Games played since a system reset.
24	Games Since Door Close	Games played since the last time the door was closed.
25	Games Since Game Initialization	Total of revenue games.

### 20: NGCB Bill Meters



See the latest version of the ProSlot Setup and Operations Manual for further description on Meter Groups.

### 21: Payback Percentage Display

### 22: Fund Transfer History

NGCB Fund Transfer Record Types	
Type Number	Description
0	Voucher In
1	Voucher Out
2	Electronic Fund Transfer In
3	Wagering Account Transfer In
4	Wagering Account Transfer Out
5	Non-Cashable Electronic Promotion In
6	Cashable Electronic Promotion In
7	Non-Cashable Electronic Promotion Out
8	Cashable Electronic Promotion Out
9	Coupon Promotion In
10	Coupon Promotion Out



## Jumper Configuration



Position 1



Position 2

Jumper	Shipping Position	Purpose	Pos 1	Pos 2
JW1	OUT (OFF)	External Antenna	IN	OUT
JW 2	2 MEG	EPROM Size	2 MEG	4 MEG
JW 3	32K	Personality ROM Address	32K	64K
JW 4	VBB	RAM Power Select	+5	VBB
JW5	RS232	RX Port 3B	RS232	RS422
JW6	OUT (OFF)	DSR Input 3A	IN	OUT
JW7	OUT (OFF)	DTR Output 3A	IN	OUT
JW8	RS232	Link RX	RS232	RS422
JW9	Enable	Link RS422 Enable	Disable	Enable
JW10		Not Applicable		
JW11	OUT (OFF)	MPU Detect Feature	IN	OUT
JW12	IN (ON)	SafeRAM® Key	IN	OUT
JW13	ISOL TX	Bill Acceptor TX	ISOL	RS232
JW14	ISOL RX	Bill Acceptor RX	ISOL	RS232
JW15	OUT (OFF)	VBB Door Open Latch	IN	OUT
JW16	ADC	Smart Socket Enable	ADC	+5
JW17	OUT (OFF)	Door Open Input	IN	OUT
JW18	OUT (OFF)	Alarm	IN	OUT
JW19	IN (ON)	MPU Board Antenna	IN	OUT
JW20	OUT (OFF)	Battery	IN	OUT
JW21	OUT (OFF)	MPU Backplane Detach Detect	IN	OUT



## DIP Switch Selections

DIP Switch		Switch	Pack
Secondary Device Protocol		sw4-sw6	DS1
Denomination		sw1-sw4	DS2
Bill Acceptor		sw5-sw6	DS2
Special Feature	Diverter Optic Support	sw8	DS2
	EFT Support (MC=01 or 13)	sw8	DS2
	Game Feature (Reel Spin)	sw7	DS2
Market Code		sw1-sw8	DS3
Hardware Exception Lock		sw5	DS3
Tokenization		sw6	DS3

### Bill Acceptor

Bill Acceptor-sw5, sw6			
sw5	sw6	Value	DS2
ON	ON	00	None
OFF	ON	01	GPT/ARDAC

Bill Acceptor-sw5, sw6			
sw5	sw6	Value	DS2
ON	OFF	02	JCM WBA
OFF	OFF	03	MARS

## DIP Switch Selections

### Denomination

Denomination sw1-sw4, DS2					
Market Codes 0-17, 22 <sup>1</sup> , 24, 25, 28, 29, 30, 31					
sw1	sw2	sw3	sw4	Value	Denom.
ON	ON	ON	ON	0000	500
OFF	ON	ON	ON	0001	250
ON	OFF	ON	ON	0002	100
OFF	OFF	ON	ON	0003	50
ON	ON	OFF	ON	0004	25
OFF	ON	OFF	ON	0005	20
ON	OFF	OFF	ON	0006	10
OFF	OFF	OFF	ON	0007	5
ON	ON	ON	OFF	0008	2
OFF	ON	ON	OFF	0009	1
ON	OFF	ON	OFF	0010	0.50
OFF	OFF	ON	OFF	0011	0.25
ON	ON	OFF	OFF	0012	0.20
OFF	ON	OFF	OFF	0013	0.10



## DIP Switch Selections

### Denomination

Denomination sw1-sw4					
Market Codes 1-17, 22 <sup>1</sup> , 24, 25, 28, 29, 30					
sw1	sw2	sw3	sw4	Value	Denom.
ON	OFF	OFF	OFF	0014	0.05
OFF	OFF	OFF	OFF	0015	0.01
ON	ON	ON	ON	0016	4 (MC=07)
ON	ON	ON	ON	0017	2.5 (International)
<sup>1</sup> Does not support denominations less than 2.0					
Market Codes 18, 20					
sw1	sw2	sw3	sw4	Value	Denom.
ON	ON	ON	ON	0000	5000
ON	OFF	ON	ON	0002	1000
OFF	OFF	ON	ON	0003	500
OFF	ON	OFF	ON	0005	200
Market Code 19					
sw1	sw2	sw3	sw4	Value	Denom.
ON	ON	ON	ON	0000	1000
OFF	ON	ON	ON	0001	500
ON	OFF	ON	ON	0002	250
ON	ON	OFF	ON	0004	50
OFF	ON	OFF	ON	0005	25
Market Code 21					
sw1	sw2	sw3	sw4	Value	Denom.
ON	ON	ON	ON	0000	1000
OFF	ON	ON	ON	0001	500
ON	OFF	ON	ON	0002	250
OFF	OFF	ON	ON	0003	200
ON	ON	OFF	ON	0004	100
Market Code 23					
sw1	sw2	sw3	sw4	Value	Denom.
ON	ON	ON	ON	0000	500
ON	OFF	ON	ON	0002	100
OFF	OFF	ON	ON	0003	50
ON	ON	OFF	ON	0004	25



## DIP Switch Selections

Denomination

Market Code 23					
sw1	sw2	sw3	sw4	Value	Denom.
ON	OFF	OFF	ON	0006	10
OFF	OFF	OFF	ON	0007	5
ON	ON	ON	OFF	0008	1
OFF	ON	ON	OFF	0009	0.50
ON	OFF	ON	OFF	0010	0.25
OFF	OFF	ON	OFF	0011	0.20
ON	ON	OFF	OFF	0012	0.10
OFF	ON	OFF	OFF	0013	0.05
ON	OFF	OFF	OFF	0014	0.02
OFF	OFF	OFF	OFF	0015	0.01
Market Code 26 <sup>1</sup> , 27					
sw1	sw2	sw3	sw4	Value	Denom.
ON	OFF	OFF	ON	0006	5
OFF	OFF	OFF	ON	0007	2
ON	ON	ON	OFF	0008	1
OFF	ON	ON	OFF	0009	0.50
ON	OFF	ON	OFF	0010	0.25
OFF	OFF	ON	OFF	0011	0.20
ON	ON	OFF	OFF	0012	0.10
OFF	ON	OFF	OFF	0013	0.05
ON	OFF	OFF	OFF	0014	0.02
MC 26 supports denominations greater than 5. See MC 0.					

## DIP Switch Selections

Market Code (Jurisdiction)

Market Code sw1-sw4, sw7, and sw8, DS3							
sw1	sw2	sw3	sw4	sw7	sw8	Value	Market
ON	ON	ON	ON	ON	ON	00	Nevada, VLC
OFF	ON	ON	ON	ON	ON	01	New Jersey
ON	OFF	ON	ON	ON	ON	02	Deadwood, SD; Quebec, Canada
OFF	OFF	ON	ON	ON	ON	03	France-Nom %
ON	ON	OFF	ON	ON	ON	04	France-Basic %



## DIP Switch Selections

Market Code (Jurisdiction)

Market Code sw1-sw4, sw7, and sw8, DS3							
sw1	sw2	sw3	sw4	sw7	sw8	Value	Market
OFF	ON	OFF	ON	ON	ON	05	Puerto Rico
ON	OFF	OFF	ON	ON	ON	06	South Africa
OFF	OFF	OFF	ON	ON	ON	07	Special Denom. (AZ, Intl)
ON	ON	ON	OFF	ON	ON	08	Indiana
OFF	OFF	OFF	OFF	OFF	OFF	09	Reserved
ON	OFF	ON	OFF	ON	ON	10	Colorado
OFF	OFF	ON	OFF	ON	ON	11	USAF
ON	ON	OFF	OFF	ON	ON	12	OLGC
OFF	ON	OFF	OFF	ON	ON	13	Mississippi
ON	OFF	OFF	OFF	ON	ON	14	Germany
OFF	OFF	OFF	OFF	ON	ON	15	New Mexico
ON	ON	ON	ON	OFF	ON	16	England
OFF	ON	ON	ON	OFF	ON	17	Portugal
ON	OFF	ON	ON	OFF	ON	18	Italy
OFF	OFF	ON	ON	OFF	ON	19	Greece
ON	ON	OFF	ON	OFF	ON	20	Russia
OFF	ON	OFF	ON	OFF	ON	21	Chile
ON	OFF	OFF	ON	OFF	ON	22	Venezuela
OFF	OFF	OFF	ON	OFF	ON	23	Estonia
ON	ON	ON	OFF	OFF	ON	24	Philippines
OFF	ON	ON	OFF	OFF	ON	25	Finland
ON	OFF	ON	OFF	OFF	ON	26	Ireland
OFF	OFF	ON	OFF	OFF	ON	27	Euro
ON	ON	OFF	OFF	OFF	ON	28	Switzerland/ Slovenia
OFF	ON	OFF	OFF	OFF	ON	29	Manitoba
ON	OFF	OFF	OFF	OFF	ON	30	Hong Kong/Macau
OFF	OFF	OFF	ON	ON	ON	31	Uruguay



## DIP Switch Selections

### Reel Map-Win Table

The default MAP 00-WIN 00 is the only configuration supported. DS3 sw5-sw6 should be left in the default ON position.

### Secondary Device Protocol

DIP Switch DS1 (SW4, SW5 and SW6 Secondary Device Protocol)			
System	SW4	SW5	SW6
Anchor 1.6	OFF	ON	ON
Bally Secondary Game (BSG)	OFF	ON	OFF
Secondary Device (SED) <sup>1</sup>	ON	OFF	ON
<sup>1</sup> Requires wheel control chip.			

DIP Switch DS1 (SW1-3 and SW7-8 Switch Functions)	
Switch	Game Function
<b>SW1</b>	<b>Message Center</b>
ON	Four-digit message center CREDIT and WIN PAID
OFF	Five-digit message center CREDIT and WIN PAID
<b>SW2</b>	<b>Reserved, Leave ON</b>
<b>SW3</b>	<b>Bonusing</b>
ON	No bonusing
OFF	Bonusing enabled
<b>SW7</b>	<b>Reserved, Leave ON</b>
<b>SW8</b>	<b>SafeRAM™ Clear</b>
Change of State (OFF/ON)	SafeRAM™ Clear procedure enable (International Jurisdictions)



## DIP Switch Selections

### Special Features

Special Features sw7-sw8 (DS2)	
sw7	Game Feature
ON	Normal Reel Spin
OFF	Crazy Reel Spin
sw8	Diverter Optic Support
ON	Not Present
OFF	Present
sw8*	EFT Support
ON	Not Present
OFF	Present
*MC= 01 or 13	

DS3 sw6 - Tokenization	
ON	Tokenization unavailable
OFF	Tokenization Available through Machine Option #22



## SafeRAM™ Clear Procedure

SafeRAM™ Clear EPROMs (S6Sx000CLR07-01) may be required.

**Complete:** Erases and reformats SafeRAM™. Game options are restored to factory default. All counters (soft meters) reset to zero. Press and hold the PSEUDO COIN and TEST buttons, then switch power ON. When the message **CH C** displays in WIN PAID, release the buttons. The **CH C** is followed by **CL C**.

Note: For machines configured for MAPS operation, a Complete SafeRAM™ Clear is required whenever the MPU board is changed.

**Full:** Erases and reformats SafeRAM™. Game options are Resets all counters to zero except the SafeRAM™ Clear counter. Game options are restored to factory default. Press and hold the PSEUDO COIN button, then switch power ON. When the message **CH F** appears in WIN PAID, release the button. The **CH F** is followed by **CL F**.

**Partial:** Zeros all counters except SafeRAM™ Clear. All game configurations defined by DIP switches, jumper selections, and game options are preserved. Switch power ON. The **CH P** displays in WIN PAID. The **CH P** is followed by **CL P**.

If an error occurs during SafeRAM™ Clear as designated by **E C**, **E F**, **E P** in WIN PAID, repeat the operation.

Upon a successful SafeRAM™ Clear, the button and tower lamps flash. Switch power OFF and replace the SafeRAM™ Clear chips with the corresponding Mains. Replace MPU Assembly and switch machine power ON. The machine will enter a Reel Calibration procedure whereby the home position is recorded in SafeRAM™. For tilt-free operation it is important that the procedure completes without interruption.



## Tower Light Settings

Lights (Setting)	Function	Tower Display
2-Light (0000)	Service	Top Flashing
	Jackpot	Top Steady
	Tilts	Bottom Flashing
	Door(s)	Bottom Steady
	Hopper Pay	Not Applicable
3-Light (0001)	Service	Bottom Flashing
	Jackpot	Top Flashing
	Tilts	Middle Steady
	Door(s)	Middle Flashing
	Hopper Pay	Not Applicable
4-Light (0002)	Service	Middle Flashing
	Jackpot	Top Steady
	Tilts	Middle Flashing
	Door(s)	Bottom Steady
	Hopper Pay	Not Applicable
2-Light (0003)	Service	Top Flashing
	Jackpot	Top Steady
	Tilts	Bottom Flashing
	Door(s)	Bottom Steady
	Hopper Pay	Top Steady
3-Light (0004)	Service	Bottom Flashing
	Jackpot	Top Flashing
	Tilts	Middle Flashing
	Door(s)	Bottom Steady
	Hopper Pay	Not Applicable
3-Light (0005)	Service	Bottom Flashing
	Jackpot	Top Flashing
	Tilts	Middle Steady
	Door(s)	Middle Flashing
	Hopper Pay	Not Applicable
2-Light (0006)	Service	Top Steady
	Jackpot	Top Flashing
	Tilts	Top Flashing
	Door(s)	Bottom Flash or Fast Flash if Drop*
	Hopper Pay	Not Applicable
	Host Disabled	Top/Bottom Steady

## Tower Light Settings

Lights (Setting)	Function	Tower Display
2-Light (0007)	Service	Top Steady
	Jackpot	Top/Bottom Slow Flash
	Tilts	Top Slow Flash
	Door(s)	Bottom Flash or fast Flash if Drop
	Hopper Pay	Not Applicable
	Host Disabled	Top/Bottom Steady
	Administration	Top Fast Flash
*Light remains illuminated until the start of the next game.		

## Progressive Settings (External) Mikohn® Link

CON2-A Settings		
PSP	F3	SNGL
	F4	M-08
	F5	3 SEC
	F6	JP0
	F7	\$\$\$\$
	F8	MS00
MPU Jumpers	JW8	2 - 3
	JW9	2 - 3
	U24	Removed
	Opto-Isolator 4N35	Iso 1 on Backplane
Options	02	0004
	07	Desired number of Jackpots
	78Lo	Machine ID (1-32)



## Jumper Configuration V7000/V7200/V8000

Jumper	Shipping Position	Game Maker® (V700/V7200) Game Magic® (V8000)
W1	Disabled	Enables external antenna circuit
W2	Open	Connects pin 7 (PRE) of U3 (NMC93C56) and ground
W3	Open	Connects pin 6 (PE) of U3 (NMC93C56) and ground
W4	Open	Connects pin 14 (CTS) of U19 (82510) and pin 4 (EN) of U12 (75ALS194) to ground
W5	Open	Connects pin 14 (1A+) of U13 (75ALS194) and pin 10 (1Y+) of U12 (75ALS194) to VCC
W6	Open	Connects pin 11 (1Y-) of U12 (75ALS194) and pin 15 (1A-) of U13 (75ALS195) to ground
W7	On	Connects pin 2 of U32 (74HC14) to HSYNC
W8	On	Connects pin 4 of U32 (74HC14) to VSYNC
W9	On	Connects TP1 with VSYNC
W10	Off	Connects TP2 with HSYNC
W11	Off	Connects VCC with VDOOR
W12	On	Connects VBACKUP and VDOOR
W13	Off	Connects pin 12 (Q7) of U22 (74HC273) and pin 7 of U10 (ULN2813). Allows of either high or low output signal for COIN 2 LOCKOUT
W14	Off	Connects pin 6 (Q6) of U22 (74HC273) and pin 7 of U10 (ULN2813). Allows of either high or low output signal for COIN 1 LOCKOUT
W15	1-3	Connects CSTBY to VBAT or ground
W16	Open	Connects ALARM to Q17
W17	1-3	Enables B1 battery circuit
W18	Open	Connects pin 4 of RP8 (MODCK) and ground
W19	In	Connects pin 31 of EPROM socket M0 to A19
W20	Open	Connects pin 31 (A18) of EPROM socket M0 (U51) to VCC
W21	Open	Connects pin 29 (A14) of EPROM socket M0 (U51) to WELS
W22	In	Connects pin 29 (A14) of EPROM socket M0 (U51) to A15
W23	In	Connects pin 30 (A17) of EPROM socket M0 (U51) to A18
W22	In	Connects pin 29 (A14) of EPROM socket M0 (U51) to A15
W23	In	Connects pin 30 (A17) of EPROM socket M0 (U51) to A18
W24	Open	Connects pin 30 (A17) of EPROM socket M0 (U51) to VCC
W25	Open	Connects pin 29 (A14) of EPROM socket M1 (U58) to A15
W26	In	Connects pin 19 (A14) of EPROM socket M1 (U58) to A15
W27	In	Connects pin 31 (A15) of EPROM sockets P1 (U78), P2 (U79), P4 (U46), P5 (U52), and P6 (U59) to VCC



## Jumper Configuration V7000/V7200/V8000

Jumper	Shipping Position	Game Maker® (V700/V7200) Game Magic® (V8000)
W28	Open	Connects pin 31 (A15) of EPROM sockets P1 (U78), P2 (U79), P4 (U46), and P5 (U52), and P6 (U59) to BMA14
W29	Open	Connects pin 29 (WE) of EPROM sockets P1 (U78), P2 (U79), P4 (U46), P5 (U52), and P6 (U59) to BMWEHS
W30	In	Connects pin 29 (WE) of EPROM sockets P1 (U78), P2 (U79), P4 (U46), P5 (U52), and P6 (U59) to BMA14
W31	In	Connects pin 31 (A15) of EPROM sockets P3 (U86), P7 (U67), P8 (U73), P9 (U80), and P10 (U87) to VCC
W32	Open	Connects pin 31 (A15) of EPROM sockets P3 (U86), P7 (U67), P8 (U73), P9 (U80), and P10 (U87) to BMA14
W33	Open	Connects pin 29 (WE) of EPROM sockets P3 (U86), P7 (U67), P8 (U80), and P10 (U87) to BMWEHS
W34	In	Connects pin 29 (WE) of EPROM sockets P3 (U86), P7 (U67), P8 (U73), P9 (U80), and P10 (U87) to BMA14
W35	In	Connects pin 31 (A18) of sockets G0 and G1 to VCC
W36	Open	Connects pin 31 (A18) of sockets G0 and G1 to VA18
J2	1-2	Sound Mute
JP1	Open	DataVault™
JP4	2-3	External sound select
JP5	2-3	External sound select
JT1	Open	
JT2	Open	
JT3	Open	
JT4	Open	
JW1	1-2	Pins 1-2 for battery monitoring

## Jumper Configuration V8700/S8700

Jumper	Shipping Position	EVO® (V8700) EVO® Hybrid (S8700)
JW2	2-3 (off)	Battery on/off, pins 2-3 for storage, otherwise on, pins 1-2
JW3	1-2	Pins 1-2=current loop bill acceptor, pins 3-4 RS-232 bill acceptor
JW4	1-2	Pins 1-2=current loop bill acceptor, pins 3-4 RS-232 bill acceptor
JW5	1-2	Pins 1-2=offboard serial port, pins 3-4=DataVault™ output
JW6	2-3	Pins 1-2=offboard serial port, pins 3-4=DataVault™ output
JW7	2-3	Pins 1-2=development only



## Jumper Configuration

## V8700/S8700

Jumper	Shipping Position	EVO® (V8700)
		EVO® Hybrid (S8700)
JW8	2-3	Pins 1-2=development only
W1	1-6, 3-4	Pins 1-6=Vbat to RTC, pins 3-4=CPU not battery backed
W4	Open	~berr input used for development only
W6	Open	External antenna connection
W11	Jumped	A15 for main ROM
W12	Open	Write enable for main RAM development
W13	Jumped	A18 for main ROM
W14	Open	Vcc for main RAM development
W15	Jumped	A19 for Main ROM
W16	Open	Vcc for main ROM
W17	Open	Write enable for main RAM development
W18	2-3	Pins 1-2 for battery extended RAM, pins 2-3 otherwise
W19	Jumped	A15 for main ROM
W20	1-2	Pins 1-2 for battery extended RAM, pins 2-3 otherwise
W21	Open	Pins 1-2 for extended RAM battery back
W22	Jumped	Battery to door circuit
W23	Open	Vcc to door 4 circuit
W24	Jumped	Battery to door circuit
W25	1-2	Coin enable polarity
W26	1-2	Coin deflector polarity
W33	Open	Future Use
W40	Open	System port TTL
W41	Open	System port TTL
W42	Open	Future Use
W43	Open	RS422 termination resistor
W44	Open	RS422 termination resistor
W45	Open	Future Use
W46	Open	RE232 Jmodem disable
W47		Not applicable
W48	1-2	Pins 1-2 for extended RAM battery back
W49	1-2	Pins 1-2 for SRAM battery back
W50	Open	Development-PGM select, P1, P2, P4, P5, P6
W51	Jumped	PGM Select, P1, P2, P4, P5, P6
W52	Open	Development-A14 Select P1, P2, P4, P5, P6
W53	Jumped	A14 Select P1, P2, P4, P5, P6
W54	Open	Development-PGM Select P3, P7, P8, P9, P10
W55	Jumped	PGM Select P3, P7, P8, P9, P10



## Jumper Configuration

## V8700/S8700

Jumper	Shipping Position	EVO® (V8700) EVO® Hybrid (S8700)
W56	Open	Development-A14 Select P3, P7, P8, P9, P10
W57	Jumped	A14 Select P3, P7, P8, P9, P10
W58	Jumped	RS232 modem TSD
W59	Jumped	RS232 modem TSD
W60	Jumped	RS232 modem DTR
W61	Jumped	RS232 modem DTR
W62	Jumped	RS232 modem RXD
W63	Jumped	RS232 modem RXD
W64	Jumped	RS232 modem DCD
W65	Jumped	RS232 modem DCD
W66	Jumped	A18 high, on board video
W67	Open	A18 active, on board video
W68	Open	HSYNC, on board video
W69	Open	VSYNC, on board video
W70	Open	Crystal config jumper
W71	Open	Crystal config jumper

## DIP Switch Operation

## V7000/V7200/V8000

## V8700/S8700

Switch	DIPSW1		DIPSW2	
	Level	Description	Level	Description
1	ON	Autoplay	N/A	Reserved
2	ON	Ignore Checksum	ON	Deluxe Sound
3	ON	Show State Status	N/A	Reserved
4	ON	Host Override	ON	Enable 12 Button Deck
5	ON	Printer/Hopper Override	ON	Bill to Tray Option
6	ON	Watchdog Override	ON	Touchscreen Not Installed
7	ON	EEPROM Clear	ON	Enable Progressive Change
8	ON	SafeRAM™ Clear	ON	Show Error Log



## EEPROM Options

V7000/V7200/V8000

V8700/S8700

EEPROM Options	V7	V72	V8	V87	S87
Current Jurisdiction	X	X		X	X
Primary Host/Secondary Host	X	X		X	X
Host Protocol			X		
SAS® Version	X	X		X	X
Chassis Type	X	X		X	X
Coin Acceptor	X	X		X	X
Bill Acceptor	X	X	X	X	X
Printer Type		X		X	X
Hopper Type	X	X		X	X
Door Type	X	X		X	X
Double Down	X	X		X	X
Knock Off Options			X		
Tournament	X	X		X	X
Electronic Funds Transfer (EFT)		X		X	X
Secondary Device	X	X		X	X
Residual Credit Mode	X	X		X	X
Win Evaluation Preference		X		X	X

Current Jurisdiction

V7000/V7200

V8700/S8700

Jurisdiction	Market
Locked	VLC
1	International 60 Hz
2 (Locked)	New Jersey
3 (Locked)	GLI
4	International 50 Hz
5	Default
6	Uruguay
7	South Africa
8	Puerto Rico

Jurisdiction	Market
9	Delaware
10	New Mexico
11	OLGC
12	Swiss B Wager Limit
13	Swiss A No Wager Limit/Slovenia
14	USAF 2000 Win Limit
15	USAF No Win Limit
16	Manitoba



## Denomination Format

**V7000/V7200**

**V8700/S8700**

Currency Symbol	
NONE	R
TOKEN	CHF
\$	BS

Currency Symbol	
P	€
EU	£
KR	

Currency formatting is configurable by the Operator. Selecting NONE or TOKEN shows all bookkeeping values in credits or integers instead of monetary amounts.

## Accounting Sub Menu

**V7000/V7200/V8000**

Game Maker® (V7200/V7000)

**V8700/S8700**

Meters	Bookkeeping and Event Counters Bill Acceptor Transactions Voucher Accounting Game Activity Double Down Activity Total Weighted Theoretical Percentage Internal Progressive Meters Slot Accounting System (SAS®) SAS® Bonus Meters SAS® Progressive Meters
Win Records	All Games Game Personality
Game Recall	All Games Game Personality
SD Admin	
Printed Ticket History	
Redemption History	



## Accounting Sub Menu

V7000/V7200/V8000

Game Magic® (V8000)

V8700/S8700

Meters	Bookkeeping and Event Counters
	Game Activity
	Double or Nothing Activity
	Hold Percentage Performance
	Bill Acceptor Transactions
Win Records	
	Game Personality
Game Recall	
	All Games
	Game Personality

EVO® (V8700) / EVO® Hybrid (S8700)

Meters	Bookkeeping and Event Counters
	Bill Acceptor Transactions
	Vouchers/Coupon Accounting
	Game Activity
	Double Down Activity
	SAS® Bonus Meters
	SAS® Progressive Meters
	Total Weighted Theoretical Percentage
	Internal Progressive Meters
	External Progressive Controllers
	Slot Accounting System (SAS®)
Win Records	
	All Games
	Game Personality
Game Recall	
	All Games
	Game Personality
SD Admin	
Validation History	
Redemption History	



# Accounting Sub Menu **V7000/V7200/V8000** **V8700/S8700**

Bookkeeping and Event Counters **V7000/V7200/V8000**  
**V8700/S8700**

Meter	Description	V7	V72	V8	V87	S87
Current Credits	Credits available to the Player when the machine returns to revenue operation.	X	X	X	X	X
Games Played Since Reset	Total of games completed since the last system reset.	X	X	X	X	X
Games Played Since Door Closed	Total of games completed since closing of main door.	X	X	X	X	X
Total In	Amount wagered on all games in machine.	X	X	X	X	X
Total Out	Amount of winnings paid by machine.	X	X	X	X	X
Total Drop	Combined COIN to DROP and BILL DROP.	X	X	X	X	X
Total Bill Acc. In	Amount accepted by the bill acceptor.	X	X		X	X
Attend. Paid	Amount accepted by the bill acceptor.	X	X	X	X	X
Soft Atten. Paid	Purchased credits (from a bill transaction) paid by Attendant.				X	X
Net Atten. Paid	Amount of ATTEN. PAID for credits won by the Player.	X	X			
Gamble Played	Residual credits wagered.	X	X		X	X
Gamble Won	Gambled credits won.	X	X		X	X
Money Won	Value of credits won by the Player.				X	X
Prog. Jackpot	Quantity of jackpots hit for games configured for a prog. JP or merchandise award.	X	X			
SD Wins	Amount of winnings from a secondary device.	X	X			
Jackpot/ Handpay	Portion of ATTEN. PAID resulting from a win lockup.	X	X	X	X	X
Coin Acceptor	Amount accepted by coin acceptor.	X	X	X	X	X



# Accounting Sub Menu V7000/V7200/V8000

## V8700/S8700

Bookkeeping and Event Counters V7000/V7200/V8000

V8700/S8700

Meter	Description	V7	V72	V8	V87	S87
Hopper Out	Amount dispensed by the hopper.	X	X	X	X	X
Machine Resets and Timestamps: WARM	Number of system resets from causes other than power OFF.	X	X	X	X	X
Machine Resets and Timestamps: COLD	Number of system resets from power OFF.	X	X	X	X	X
Printer Out	Amount of redeemable vouchers dispensed by the printer.	X	X			
Hopper Overpay	Amount of extra coins dispensed by the hopper.	X	X	X	X	X
Bill Drop	Amount of currency accepted.	X	X	X	X	X
Coin to Drop	COIN ACCEPTOR occurring while the hopper is full.	X	X	X	X	X
Soft Collect	Coins paid from hopper from purchased credits.	X	X		X	X
Other Collect	Electronic Transfers (EFT or ECT)	X	X	X	X	X
Cancel Credits	Soft credits (non win credits) and hard credits (won credits) paid by an Attendant.	X	X	X	X	X
Host Bonuses	Number of bonuses from SAS® host communications.	X	X		X	X
Bonuses Paid	An accumulated value of bonuses from SAS® host communications.	X	X		X	X
Door Access; Logic, Main, Drop, Service, Bill, Stack	Number of times each door has been opened.	X	X	X	X	X
Last Access; Logic, Main, Drop, Service, Bill, Stack	Time and date stamp for the most recent access for each door.	X	X		X	X



## SafeRAM™ Clear Procedure V7000/V7200/V8000 V8700/S8700

With power OFF, set DIPSW1 sw8 to ON. Insert V7S1000CLEAR-02 EPROM into P10 for Game Maker® machines and U85 in EVO® machines and switch power ON (some versions of Mains do not require CLEAR Chips). When “SAFERAM CLEAR ENABLED” appears, actuate the audit key switch. Follow the on-screen instructions.

## Tower Light Settings V7000/V7200/V8000 V8700/S8700

Lights (Setting)	Function	Tower Display
2-Light 0000	Door(s)	Bottom Steady
	Tilt	Bottom Flash
	Jackpot	Top Steady
	Service	Top Flash
	Hopper Pay	Not Applicable
	Host Disabled	Not Applicable
	Printer Jam or Empty	Top Flash
	Paper Low	Top Slow Flash
*3-Light 0001	Door(s)	Bottom/Middle Flash (Top flash if Drop)
	Tilt	Bottom Flash
	Jackpot	Top Flash
	Service	Middle Flash
	Hopper Pay	Not Applicable
	Host Disabled	Not Applicable
	Printer Jam or Empty	Middle Flash
	Paper Low	Middle Slow Flash
4-Light 0002	Door(s)	Bottom Steady
	Tilt	Top Flash
	Jackpot	4th Light Steady (light above top light)
	Service	Middle Flash
	Hopper Pay	Not Applicable
	Host Disabled	Not Applicable
	Printer Jam or Empty	Middle Flash
	Paper Low	Middle Slow Flash
*The machine must have a 10-button player panel. +Light remains illuminated until the start of the next game.		



# Tower Light Settings

V7000/V7200/V8000

V8700/S8700

Lights (Setting)	Function	Tower Display
2-Light 0003	Door(s)	Bottom Steady
	Tilt	Bottom Flash
	Jackpot	Top Steady
	Service	Top Flash
	Hopper Pay	Top Steady
	Host Disabled	Not Applicable
	Printer Jam or Empty	Top Flashing
	Paper Low	Top Slow Flash
*3-Light 0004	Door(s)	Bottom Steady
	Tilt	Middle Flash
	Jackpot	Top Flash
	Service	Bottom Flash
	Hopper Pay	Not Applicable
	Host Disabled	Not Applicable
	Printer Jam or Empty	Bottom Flash
	Paper Low	Bottom Slow Flash
*3-Light 0005	Door(s)	Middle Flash
	Tilt	Top Flash
	Jackpot	Top Flash
	Service	Bottom Flash
	Hopper Pay	Not Applicable
	Host Disabled	Not Applicable
	Printer Jam or Empty	Bottom Flash
	Paper Low	Bottom Slow Flash
2-Light 0006	Door(s)	Bottom Flash or Fast Flash if Drop+
	Tilt	Top Flash
	Jackpot	Top Flash
	Service	Top Steady
	Hopper Pay	Not Applicable
	Host Disabled	Top and Bottom Steady
	Printer Jam or Empty	Top Flash
	Paper Low	Bottom Slow Flash
*The machine must have a 10-button player panel. +Light remains illuminated until the start of the next game.		



## Tower Light Settings

V7000/V7200/V8000

V8700/S8700

Lights (Setting)	Function	Tower Display
2-Light 0007	Door(s)	Bottom Flash or Fast Flash if Drop
	Tilt	Top Slow Flash
	Jackpot	Top and Bottom Slow Flash
	Service	Top Steady
	Hopper Pay	Not Applicable
	Host Disabled	Top and Bottom Steady
	Printer Jam or Empty	Not Applicable
	Paper Low	Not Applicable
	Administration	Top Fast Flash
*The machine must have a 10-button player panel. +Light remains illuminated until the start of the next game.		

## Progressive Settings (External) Mikohn® Link

V7000/V7200/V8700/S8700

CON2-A Settings	Game Maker® V7000/V7200		EVO® V8700 EVO® Hybrid S8700	
PSP	F3	SNGL	F3	SNGL
	F4	M-08	F4	M-08
	F5	3 SEC	F5	3 SEC
	F6	JP0	F6	JP0
	F7	\$\$\$\$	F7	\$\$\$\$
	F8	MS00	F8	MS00
MPU Jumpers	W4	Installed	W46	Installed
	Opto-Isolator 4N35	U1 (V72) U4 (V7)	Opto-Isolator 4N35	U1
Options	Progressive Number	1	Progressive Number	1
	Game ID	1-32	Game ID	1-32
	On Screen Display	ON	On Screen Display	ON
Ensure that appropriate WIN LEVEL is set. More than one game may be assigned to one controller.				

# ***Notes***

